



# User Manual

for S6 Series Hybrid Inverter



Applicable models

S6-EH1P9.9K03-NV-YD-L

S6-EH1P12K03-NV-YD-L

S6-EH1P14K03-NV-YD-L

S6-EH1P16K03-NV-YD-L

S6-EH1P18K03-NV-YD-L

Applicable System

Single phase system

# Important Notes

---

- Due to the product development, the product specifications and functions are subject to change. The latest manual can be acquired via <https://www.ginlong.com/global>. Every attempt has been made to make this document complete, accurate and up-to-date. Individuals reviewing this document and installers or service personnel are cautioned, however, that Solis reserves the right to make changes without notice and shall not be responsible for any damages, including indirect, incidental or consequential damages caused by reliance on the material presented including, but not limited to, omissions, typographical errors, arithmetical errors or listing errors in the material provided in this document.
- Solis accepts no liability for customers' failure to comply with the instructions for correct installation and will not be held responsible for upstream or downstream systems Solis equipment has supplied.
- The customer is fully liable for any modifications made to the system; therefore, any hardware or software modification, manipulation, or alteration not expressly approved by the manufacturer shall result in the immediate cancellation of the warranty.
- Given the countless possible system configurations and installation environments, it is essential to verify adherence to the following:
  - There is sufficient space suitable for housing the equipment.
  - Airborne noise produced depending on the environment.
  - Potential flammability hazards.
  - Solis will not be held liable for defects or malfunctions arising from:
    - Improper use of the equipment.
    - Deterioration resulting from transportation or particular environmental conditions.
    - Performing maintenance incorrectly or not at all.
    - Tampering or unsafe repairs.
    - Use or installation by unqualified persons.
  - This product contains lethal voltages and should be installed by qualified electrical or service personnel having experience with lethal voltages.

# Contents

---

- 1. Introduction ..... 01
  - 1.1 Product Overview ..... 01
  - 1.2 Inverter Wire Box and Connection Points ..... 02
  - 1.3 Product Features ..... 03
  - 1.4 Packaging ..... 04
  - 1.5 Tools Required for Installation ..... 04
- 2. Safety & Warning ..... 05
  - 2.1 Safety ..... 05
  - 2.2 General Safety Instructions ..... 05
  - 2.3 Notice for Use ..... 07
  - 2.4 Notice for Disposal ..... 07
- 3. Installation ..... 08
  - 3.1 Select a Location to Install the Inverter ..... 08
  - 3.2 Product Handling ..... 10
  - 3.3 Mounting the Inverter ..... 11
  - 3.4 Inverter Wiring Overview ..... 13
  - 3.5 Ground Cable Installation ..... 14
  - 3.6 PV Cable Installation ..... 15
  - 3.7 Battery Cable Installation ..... 18
  - 3.8 AC Wiring ..... 19
  - 3.9 CT Connection ..... 20
  - 3.10 Inverter Communication ..... 21
  - 3.11 Inverter Remote Monitoring Connection ..... 29
  - 3.12 Wiring Diagram Overview ..... 30
  - 3.13 Generator on GEN port ..... 31
  - 3.14 Generator on Grid side ..... 33
  - 3.15 Parallel system Wiring ..... 35
- 4. Overview ..... 36
  - 4.1 Screen ..... 36
  - 4.2 LED Indicators ..... 36
  - 4.3 Keypad ..... 37
  - 4.4 Inverter built-in Bluetooth description ..... 37

# Contents

---

|                        |    |
|------------------------|----|
| 5. Commissioning       | 38 |
| 5.1 Pre-Commissioning  | 38 |
| 5.2 Power ON           | 38 |
| 5.3 Power OFF          | 38 |
| 5.4 HMI Screen Setting | 39 |
| 5.5 APP Setting        | 40 |
| 6. Maintenance         | 54 |
| 6.1 Smart O&M          | 54 |
| 7. Troubleshooting     | 55 |
| 8. Specifications      | 60 |
| 9. Appendix - FAQs     | 75 |

## 1.1 Product Overview

The Solis S6 series is designed for residential hybrid systems.

The inverter can work with low-voltage lithium ion and Lead-acid batteries to maximize self-consumption and provide backup power if the grid fails and there is not enough PV power to cover load demand.

The Solis S6 series consists of the following inverter models:

9.9kW, 12kW, 14kW, 16kW, 18kW

The inverter supports the following power grid types: TN-S, TN-C, TN-C-S, and TT.

The inverter contains an internal NEB that meets the requirements of NRS 097-2-1: 2024 Section 5.4.

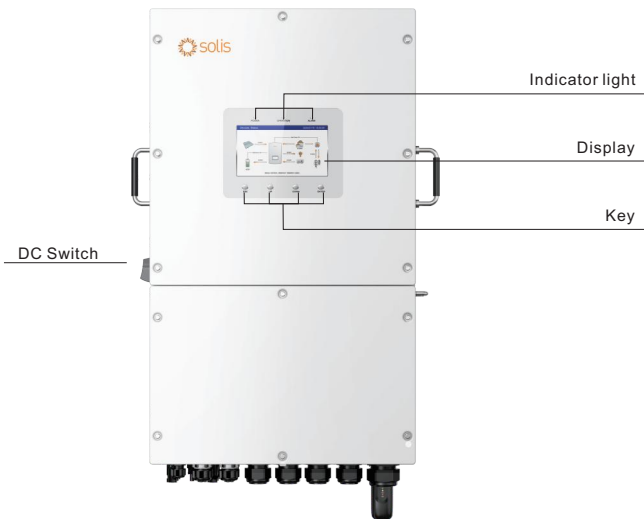


Figure 1.1 Front side view


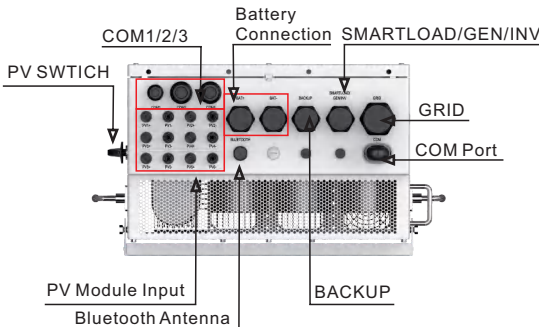


Figure 1.2 Bottom side view

## 1.2 Inverter Wire Box and Connection Points

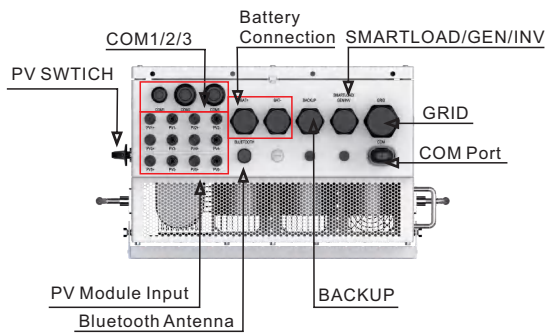

| Name                  | Description   |
|-----------------------|---|
| 1. PV Switch          | This is the PV disconnect switch for the PV                                     |
| 2. COM1               | Conduit for CT conductors should be connected here                              |
| 3. COM2               | RS485 and CAN communication cables and parallel cables should go through these  |
| 4. COM3               | RS485 and CAN communication cables and parallel cables should go through these  |
| 5. Battery Connection | Conduit for Battery conductors should be connected here                         |
| 6. SMARTLOAD/GEN/INV  | Conduit for AC conductors to generator should be connected here                 |
| 7. GRID               | Conduit for AC conductors to the main service panel should be connected here    |
| 8. PV Module Input    | Conduit for PV conductors should be connected here                              |
| 9. Bluetooth Antenna  | Extends the range of the inverter Bluetooth signal(for system commissioning)    |
| 10. BACKUP            | Conduit for AC conductors to backup loads panel should be connected here        |
| 11. COM Port          | Solis data logger gets connected here-only USB version of the loggers will work |

## 1.3 Product Features

### Highly Flexible

- Integrated 3 MPPTs with 6 strings, suitable for residential rooftop installations with multiple array orientations.
- Compatible with multiple brands of battery models giving customers multiple battery options.
- 7-Inch colorful LCD screen and built in Bluetooth provide local operation without Internet.

### Outstanding Performance

- Up to 20A/21A input current per string to support 182/210mm solar panels.
- Supports 1.6 DC:AC ratio to connect more PV capacity to the energy storage system.
- Up to 320A max.charge/discharge rating with industry highest level 18kW of backup loads support capability.
- UPS level switching time(<4ms)supporting critical loads all the time.
- High PV charge efficiency to prevent excess PV loss.
- 10 seconds 200% surge power backup overload capability. Support inductor loads.

### Intelligent Function


- Support Max 6 pcs in parallel, capable of forming a three-phase system.
- Can be used with any battery (between 40V-60V).
- Supports multiple generator access methods and can control the start and stop of the generator.
- Smart load function achieves intelligent load shedding.
- AC coupling to upgrade existing PV plant without purchasing additional accessories.
- Customizable charge/discharge time settings.
- 320A maximum charge and discharge current.
- Multiple battery protection function.

### Safe&Reliable

- Safety protection with integrated AFCI function, which actively detects arc faults in the PV Array.
- Multiple battery protection function.

## 1.4 Packaging

Please ensure that the following items are included in the packaging with your machine:

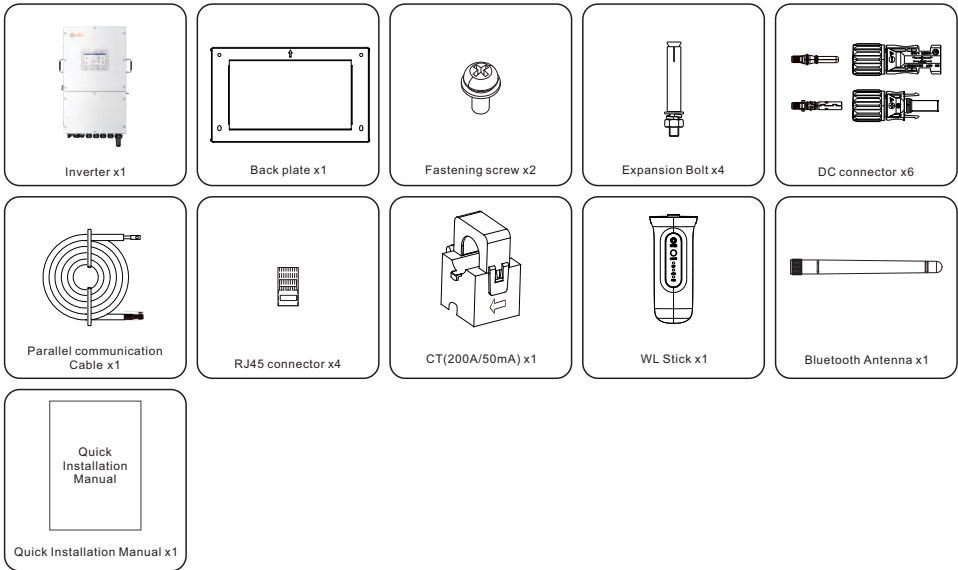

If anything is missing, please contact your local Solis distributor.

## 1.5 Tools Required for Installation





### 2.1 Safety

The following types of safety instructions and general information appear in this document as described below:



#### **DANGER**

"Danger" indicates a hazardous situation which if not avoided, will result in death or serious injury.



#### **WARNING**

"Warning" indicates a hazardous situation which if not avoided, could result in death or serious injury.



#### **CAUTION**

"Caution" indicates a hazardous situation which if not avoided, could result in minor or moderate injury.



#### **NOTE**

"Note" provides tips that are valuable for the optimal operation of your product.



#### **WARNING: Risk of fire**

Despite careful construction, electrical devices can cause fires.

- Do not install the inverter in an area containing flammable materials or gases.
- Do not install the inverter in a potentially explosive atmosphere.

### 2.2 General Safety Instructions



#### **WARNING**

Only devices in compliance with SELV (EN 69050) may be connected to the RS485 and USB interfaces.



#### **WARNING**

Do not connect PV array positive (+) or negative (-) to ground, doing so could cause serious damage to the inverter.



#### **WARNING**

Electrical installations must be done in accordance with local and national electrical safety standards.



#### **WARNING**

Do not touch any internal parts until 5 minutes after disconnection from the utility grid, PV array, and battery.



### **WARNING**

To reduce the risk of fire, over-current protective devices (OCPD) are required for all circuits connected to the inverter.

The DC OCPD shall be installed per local requirements. All photovoltaic source and output circuit conductors shall have isolators that comply with the NEC Article 690, Part II.

All Solis single phase inverters feature an integrated DC disconnect switch.



### **CAUTION**

Risk of electric shock, do not remove the cover. There are no serviceable parts inside, refer servicing to qualified and accredited service technicians.



### **CAUTION**

The PV conductors are energized with high voltage DC when the PV modules are exposed to sunlight.



### **CAUTION**

The surface temperature of the inverter can reach up to 75°C.

To avoid risk of burns, do not touch the surface of the inverter while it is operating. The inverter must be installed out of direct sunlight exposure.



### **NOTE**

PV modules used with inverter must have an IEC 61730 Class A rating.



### **WARNING**

Operations must be accomplished by a licensed electrician or a person authorized by Solis.



### **WARNING**

Installer must wear personal protective equipment during the entire installation process in case of electrical hazards.



### **WARNING**

The AC Backup Port of the inverter cannot be connected to the grid.



### **WARNING**

Please refer to the product manual of the battery before installation and configuration to the inverter.



**Systems using this product shall be designed and built in accordance with the NEC & local electrical codes & standards.**



**Please read safety instructions carefully in the manual.**



**CE certificate.**

### 2.3 Notice for Use

The inverter has been constructed according to the applicable safety and technical guidelines, use the inverter in installations that meet the following specifications only:

1. Permanent installation is required.
2. The electrical installation must be compliant with all local and national regulations & standards.
3. The inverter must be installed according to the instructions stated in this manual.
4. The inverter must be installed according to the inverter technical specifications.
5. The inverter contains an internal NEB that meets the requirements of NRS 097-2-1:2024 Section 5.4


### 2.4 Notice for Disposal

This product shall not be disposed of with household waste.

It must be segregated and brought to an appropriate disposal facility to ensure proper recycling.

This is to be done in order to avoid negative impacts on the environment and human health.

Local waste management rules shall be observed and respected.

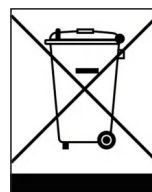

## 3.1 Select a Location to Install the Inverter

When selecting a location for the inverter, the following criteria should be considered:

- Exposure to direct sunlight may cause output power derating due to overheating. It is recommended to avoid installing the inverter in direct sunlight. The ideal location is one where the ambient temperature does not exceed 40°C.
- It is also recommended to install the inverter somewhere the rain and snow will not land directly on it. The ideal installation location is on a north-facing wall under an eave.

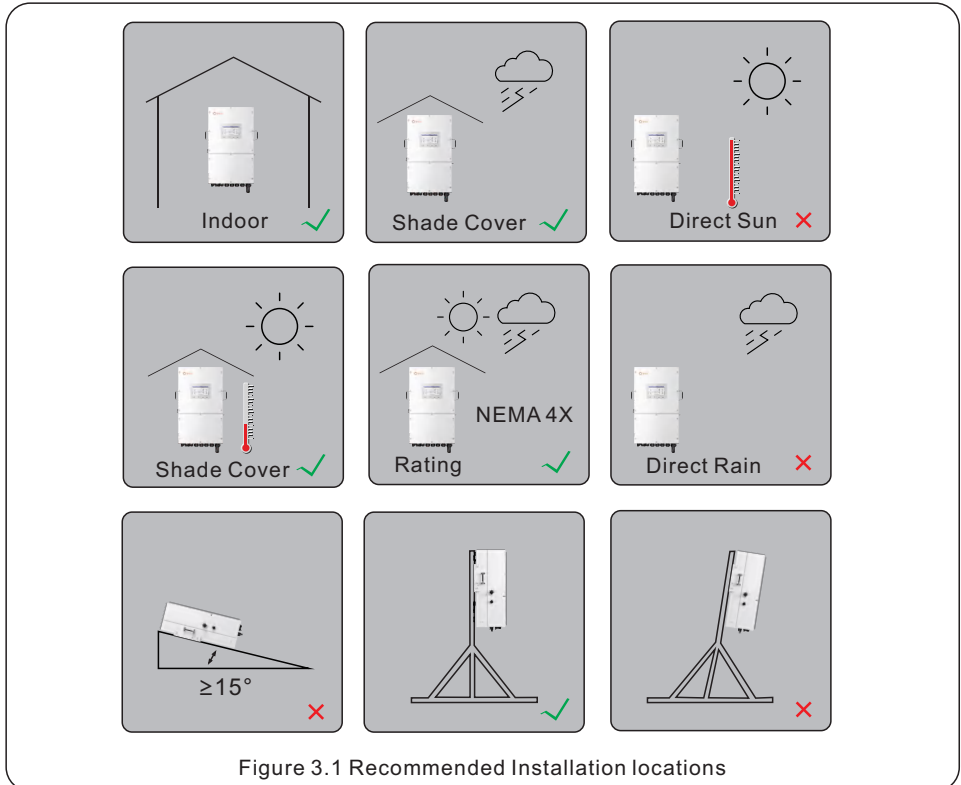


Figure 3.1 Recommended Installation locations



### **WARNING: Risk of fire**

Despite careful construction, electrical devices can cause fires.

- Do not install the inverter in areas containing highly flammable materials or gases.
- Do not install the inverter in potentially explosive atmospheres.
- The mounting structure where the inverter is installed must be fireproof.

When selecting a location for the inverter, consider the following:



## CAUTION: Hot Surface

- The temperature of the inverter heat-sink can reach 75°C.

The ambient temperature and relative humidity of the installation environment should meet the following requirements:

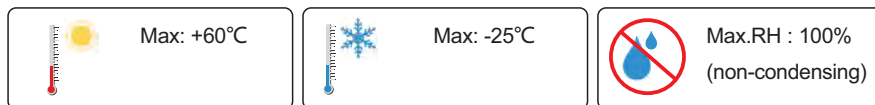


Figure 3.2 Installation environment conditions



## Load bearing surface:

Made of non-inflammable materials

Max. load bearing capacity  $\geq$  4 times of inverter weight



Figure 3.3 Load bearing structure

### 3.1.1 Clearances

- If multiple inverters are installed on site, a minimum clearance of 1000mm should be kept between each inverter and all other mounted equipment. The bottom of the inverter should be at least 800mm above of the ground or floor.
- The LCD screen located on the inverter's front panel should not be blocked
- Adequate ventilation must be present if the inverter is to be installed in a confined space.

### 3.1.2 Consult technical data

- Consult the technical specifications sections at the end of this manual for additional environmental condition requirements (temperature range, altitude, etc.)

### 3.1.3 Angle of installation

- This model of Solis inverter must be mounted vertically (90 degrees or backwards less than or equal to 15 degrees from 90 degrees straight up).

### 3.1.4 Avoiding direct sunlight

Installation of the inverter in a location exposed to direct sunlight should to be avoided.

Direct exposure to sunlight could cause:

- Power output limitation (with a resulting decreased energy production by the system).
- Premature wear of the electrical/electromechanical components.
- Premature wear of the mechanical components (gaskets) and user interface.

### 3.1.5 Air circulation

Do not install in small, closed rooms where air cannot freely circulate.

To prevent overheating, always ensure that the air flow around the inverter is not blocked.

### 3.1.6 Flammable substances

Do not install near flammable substances. Maintain a minimum distance of three meters (10 feet) from such substances.

### 3.1.7 Living area

Do not install in a living area where the prolonged presence of people or animals is expected. Depending on where the inverter is installed (for example: the type of surface around the inverter, the general properties of the room, etc.) and the quality of the electricity supply, the sound level from the inverter can be quite high.

## 3.2 Product Handling

Please review the instruction below for handling the inverter:

1. The red circles below denote cutouts on the product package.

Push in the cutouts to form handles for moving the inverter (see Figure 3.4).

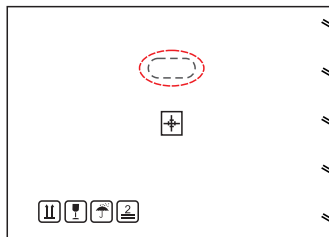


Figure 3.4 Handles used to move the inverter shown circled in red - one per side

2. Two people are required to remove the inverter from the shipping box. Use the handles integrated into the heat sink to remove the inverter from the carton.
3. When setting the inverter down, do it slowly and gently. This ensures that the internal components and the outer chassis do not take any damage.

### 3.3 Mounting the Inverter

- Mount the inverter on a wall or structure capable of bearing the weight of the machine.
- The inverter must be mounted vertically with a maximum incline of  $\pm 5$  degree. Exceeding this may cause the output power to derate.
- To avoid overheating, always make sure the flow of air around the inverter is not blocked. A minimum clearance of 1000mm should be kept between inverters or objects and 800mm clearance between the bottom of the machine and the ground.

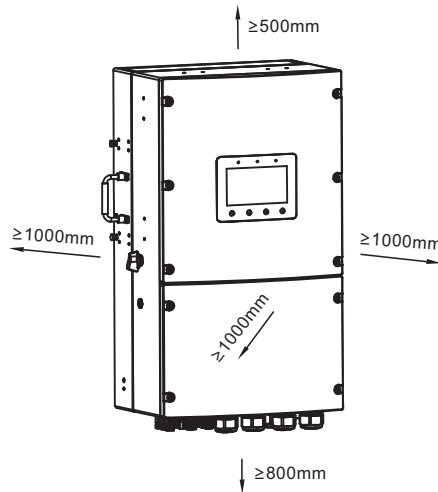


Figure 3.5 Inverter Mounting Clearances

- Visibility of the LCD screen should be considered.
- Adequate ventilation around the inverter must be provided.



**NOTE**

Nothing should be stored on top of or placed against the inverter.



**NOTE**

It is prohibited to install two units in one line up and down.



**NOTE**

If there is heat source device such as the battery cabinet under the inverter, it is recommended to install it at a distance of not less than 800mm. If there is no heat source, the minimum spacing at the bottom is 500mm.

Dimensions of mounting bracket:

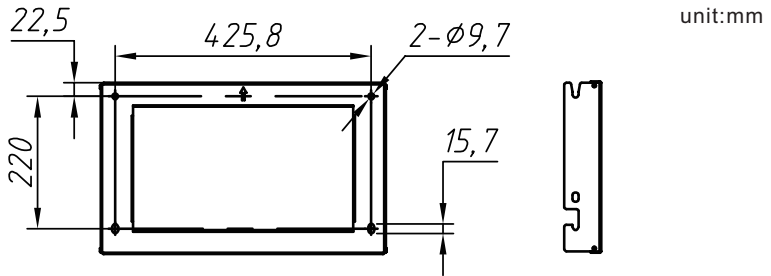


Figure 3.6 Inverter wall mounting

Once a suitable location has been found according to 3.1 using figure 3.6 mount the wall bracket to the wall.

The inverter shall be mounted vertically.

The steps to mount the inverter are listed below:

1. Select the mounting height of the bracket and mark the mounting holes.  
For brick walls, the position of the holes should be suitable for the expansion bolts.
2. Lift up the inverter (be careful to avoid body strain), and align the back bracket on the inverter with the convex section of the mounting bracket. Hang the inverter on the mounting bracket and make sure the inverter is secure (see Figure 3.7)

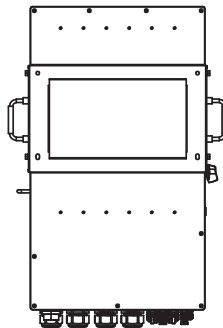


Figure 3.7 Wall Mount Bracket



**WARNING:**

The inverter must be mounted vertically.



### 3.4 Inverter Wiring Overview

|                   | Purpose  | Connection Points  |
|-------------------|--|--|
| PV Cables         | PV DC connection to the inverter                 | From the PV array to the DC+ and DC- terminals in the inverter   |
| Battery Cables    | Battery DC connection to the inverter            | From the battery (+) and (-) terminals to the inverter BAT+ and BAT- terminals   |
| AC Grid Cables    | Inverter AC connection to the main service panel | From the OCPD in the main service panel to the AC-GRID L1 and L2 terminals   |
| AC Backup Cables  | Inverter AC connection to the backup subpanel    | From the backup loads subpanel OCPD to the inverter AC-BACKUP L1 and L2 terminals                                      |
| Ground Cables     | Grounding conductors for the system              | From the main service panel ground bar to the ground bar inside the inverter wire box                                  |
| CT cable          | Communication between inverter & CT              | From CT to terminal HM.<br>For more details, refer to figure Installing the energy meter                               |
| Battery CAN cable | Communication between the inverter & the battery | From battery to terminal BMS.<br>For more details, refer to figure Installing the battery                              |
| Data Logger       | Monitoring of the system on SolisCloud           | USB COM port at the bottom of the inverter<br>(For more details, please refer to the Solis data logger product manual) |



#### NOTE

Conductor dimensions and OCPD sizing to be determined in accordance with the national electrical code (NEC) and local standards.

## 3.5 Ground Cable Installation

External ground connections are provided at the left and right sides of the inverter. Prepare OT terminals: M4. Use proper tooling to crimp the lug to the terminal. Connect the OT terminal with ground cable to the right or left side of inverter.

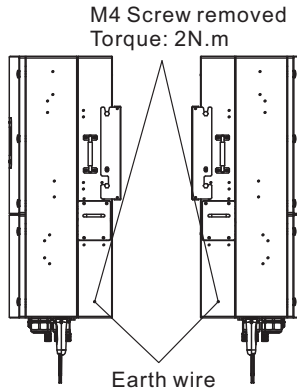


Figure 3.8 Connect the external grounding conductor

To connect the grounding terminal on the heat sink, please follow the steps below:

1. It is recommended to use copper wire for the chassis ground. Either solid conductor or stranded wire is acceptable. Refer to local code standard for wire sizing.
2. Attach OT terminal: M4.



### IMPORTANT

For multiple inverters in parallel, all inverters should be connected to the same ground point to eliminate the possibility of a voltage potential existing between inverter grounds.

3. Strip the ground cable insulation to a suitable length. (see Figure 3.9)
4. Crimp a ring connector onto the cable and then connect it to the chassis ground terminal.

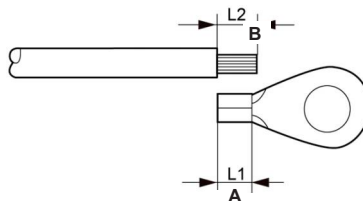


Figure 3.9 External Grounding Conductor Terminal

5. The external grounding conductor is recommended to be connected to 4mm<sup>2</sup> and above.

## 3.6 PV Cable Installation



Before connecting inverter, please make sure the PV array open circuit voltage is within the limit of the inverter.




Before connection, please make sure the polarity of the output voltage of PV array matches the“DC+”and“DC-”symbols.



Please use approved DC cable for PV system.

1. Select a suitable DC cable and strip the wires out by  $7\pm0.5\text{mm}$ . Please refer to the table below for specific specifications.

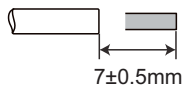

| Cable type                | Cross section (mm <sup>2</sup> ) |                   |
|---------------------------|----------------------------------|-------------------|
|                           | Range                            | Recommended value |
| Industry generic PV cable | 4.0~6.0<br>(12~10AWG)            | 4.0 (12AWG)       |

Figure 3.10

2. Take the DC terminal out of the accessory bag, turn the screw cap to disassemble it, and take out the waterproof rubber ring.



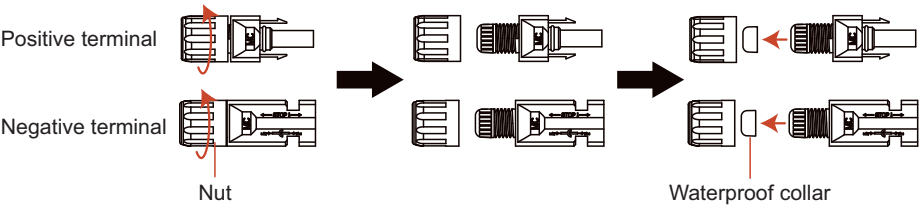


Figure 3.11


3. Pass the stripped DC cable through the nut and waterproof rubber ring.

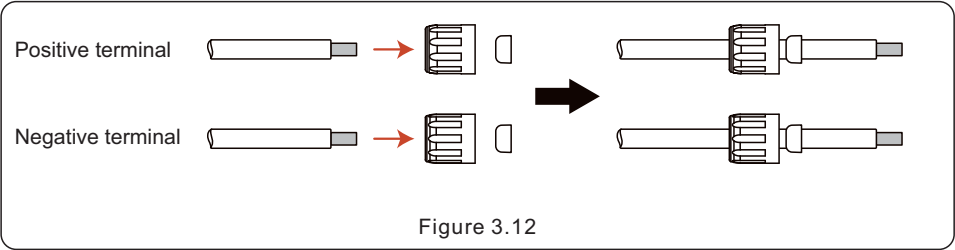

4. Connect the wire part of the DC cable to the metal DC terminal and crimp it with a special DC terminal crimping tool.

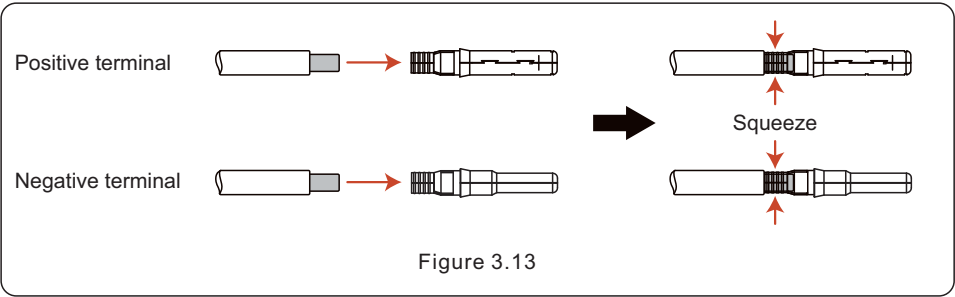

5. Insert the crimped DC cable into the DC terminal firmly, then insert the waterproof rubber ring into the DC terminal and tighten the nut.

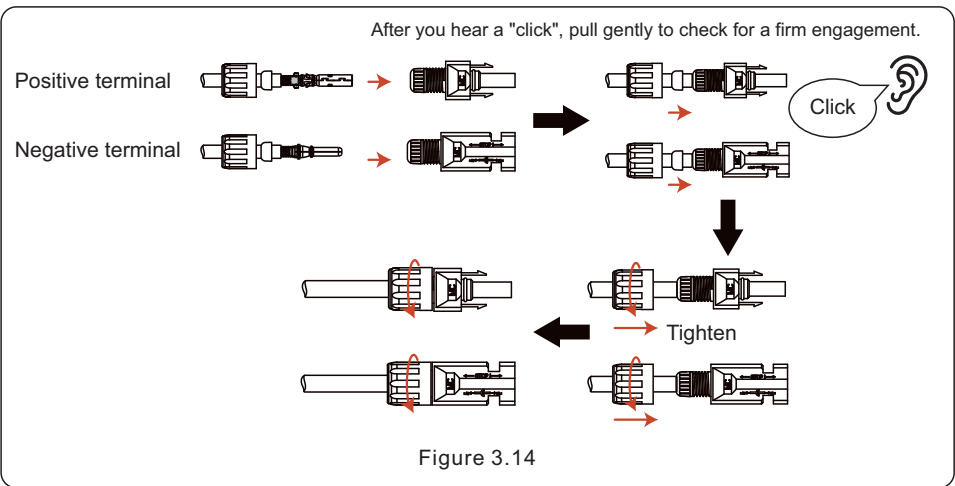

6. Measure PV voltage of DC input with multimeter, verify DC input cable polarity.

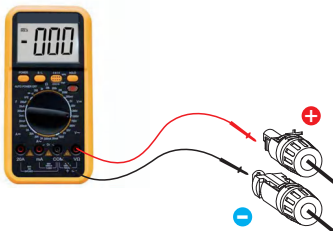


Figure 3.15

7. Connect the wired DC terminal to the inverter as shown in the figure, and a slight "click" is heard to prove the connection is correct.

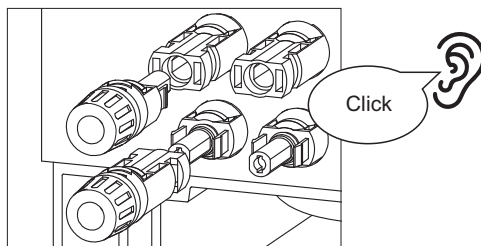


Figure 3.16



**CAUTION:**

If DC inputs are accidentally reversely connected or inverter is faulty or not working properly, it is NOT allowed to turn off the DC switch. Otherwise it may cause DC arc and damage the inverter or even lead to a fire disaster. The correct actions are:

- \*Use a clip-on ammeter to measure the DC string current.

- \*If it is above 0.5A, please wait for the solar irradiance reduces until the current decreases to below 0.5A.

- \*Only after the current is below 0.5A, you are allowed to turn off the DC switches and disconnect the PV strings.

- \* In order to completely eliminate the possibility of failure, please disconnect the PV strings after turning off the DC switch to avoid secondary failures due to continuous PV energy on the next day.


Please note that any damages due to wrong operations are not covered in the device warranty.

## 3.7 Battery Cable Installation



**NOTE:**


When installing the lower cover, ensure that the M5 round flat washer is screwed onto the smooth straight section of the screw. It must not get stuck on the thread to avoid assembly difficulties.  
(As shown in the figure below)

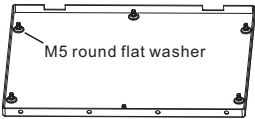

**DANGER**

Before installing the battery cables, be sure that the battery is turned off. Use a multimeter to verify that the battery voltage is 0Vdc before proceeding. Consult the battery product manual for instructions on how to turn it off.

1. The battery (+) and (-) cables shall only be connected to the inverter BAT terminals.
2. Run the cables into the wire box. Strip 13mm off the ends of each cable.
3. Crimp the R-type connectors onto the cables. Do not over crimp the connectors.
4. Remove the terminal bolts and then insert them through the connector holes.
5. Put each bolt back into the proper place, be sure to not reverse the polarity.
6. Tighten the bolts with a torque wrench screwdriver following the torque specs.
7. The battery fuse specification: EV320-5CB-500A-N.

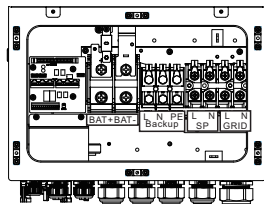

| Cable type    | Terminal     | Torque   | Recommended cable |
|---------------|--------------|----------|-------------------|
| Battery cable | M10 screws*2 | 10-12N.m | 1/0-3/0AWG*2      |

Figure 3.17 Battery cable connection



**NOTE**

Before connecting the battery, please carefully read the product manual of the battery and perform the installation exactly as the battery manufacturer specifies in the manual



**NOTE**

Please use the battery that has been matched by Solis.  
Please see the battery matching list on the Solis official website.  
If the battery is not in the list, our company will not carry out after-sales maintenance.

## 3.8 AC Wiring




**DANGER**

Before installing the AC cables, be sure that the OCPDs (breakers) are turned off.

Use a multimeter to verify that the AC voltages are 0Vac before proceeding.

There are three sets of AC output terminals and the installation steps for both are the same.

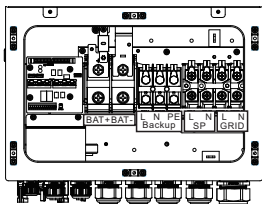

| Model     | AC Grid              | AC Backup/AC Gen     | PE                   |
|-----------|----------------------|----------------------|----------------------|
| Wire Size | 25-35mm <sup>2</sup> | 16-25mm <sup>2</sup> | 16-25mm <sup>2</sup> |
| Torque    | 4.5N.m               | 4.5N.m               | 4.5N.m               |

Figure 3.18 AC output terminals

1. Bring the AC cables for the backup loads panel (backup) and the main service panel (grid) into the inverter wire box. The backup loads panel should not be electrically connected to the main service panel.
2. Strip 13mm from the ends of each cable. Crimp the R-type connectors onto the ends.
3. Remove the terminal bolts, insert them into the connectors, then use a torque wrench to tighten the bolts down.
4. Please refer to the terminal labels to connect the AC wires to the correct terminals.



**NOTE:**

The suggested specification external AC breakers are as following.

AC grid port: 150A

Backup port: 150A

Gen port: 100A

Battery port: 350A

The temperature limit of wiring terminals for external connections should be lower than 105°C.



**NOTE:**

1. The backup PE must be directly connected to the PE copper bar of the power distribution box, rather than the inverter shell.
2. The generator itself needs to be grounded, connected to the electric box, and connected to the inverter generator port.
3. When the generator is working, disconnect the Grid breaker or leakage current protector on the side of the power box immediately.

## 3.9 CT Connection



**CAUTION:**

Make sure the AC cable is totally isolated from AC power before connecting the CT.

The CT provided in the product box is compulsory for hybrid system installation. It can be used to detect the grid current direction and provide the system operating condition to hybrid inverter.

CT Model: ESCT-TA24-200A/50mA(5m)

CT cable: Length —5m

Please install the CT on the hot line at the system grid connection point and the arrow on the CT needs to point to the grid direction.

Lead the CT wires through the COM3 port at the bottom of the inverter and connect the CT wires to the 14pin communication terminal block.

| CT Wire | 14 PIN Communication Terminal Block |
|---------|-------------------------------------|
| White   | Pin 9 (From Left to Right)          |
| Black   | Pin 10 (From Left to Right)         |


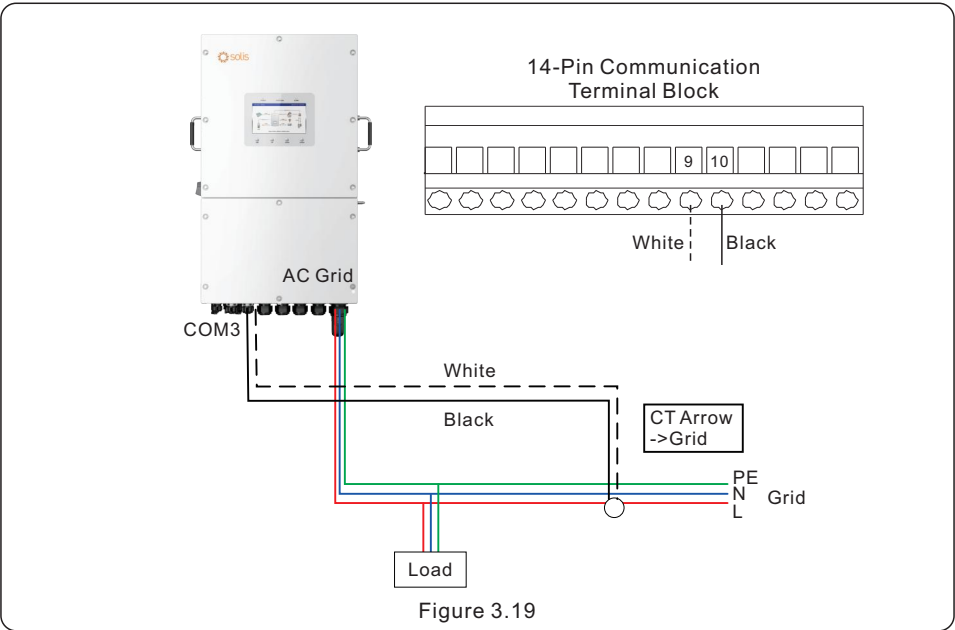


Figure 3.19



## 3.10 Inverter Communication

### 3.10.1 Communication Ports

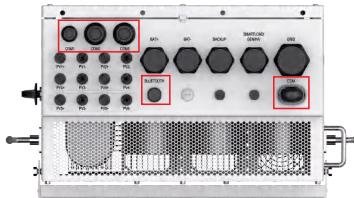

| Port    | Port Type                     | Description   |
|---------|-------------------------------|---|
| COM     | USB                           | Used for Solis data logger connection                       |
| ANTENNA | Antenna                       | Used for Antenna connection for built in Bluetooth signal   |
| COM1    | 4 hole watertight cable gland | Used for RJ45 connection inside wiring box                  |
| COM2    | 4 hole watertight cable gland | Used for RJ45 connection inside wiring box                  |
| COM3    | 6 hole watertight cable gland | Used for 12 PIN terminal block connection inside wiring box |

Wiring steps for COM1-COM3:

Step 1. Loose the cable gland and remove the watertight caps inside the cable gland based on the number of the cables and keep the unused holes with watertight cap.

Step 2. Lead the cable into the holes in the cable gland.

(COM1-COM2 Hole Diameter: 6mm, COM3 Hole Diameter: 2mm)

Step 3. Connect the cable to the corresponding terminals inside the wiring box.


Step 4. Reassemble the cable gland and ensure there is no bending or stretching of the cables inside the wiring box.



**NOTE:**

The 4-hole fastening rings inside the cable gland for COM1 and COM2 are with openings on the side.

Please separate the gap with hand and squeeze the cables into the holes from the side openings.

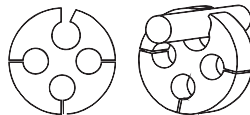

### 3. Installation

### 3.10.2 Communication Terminals

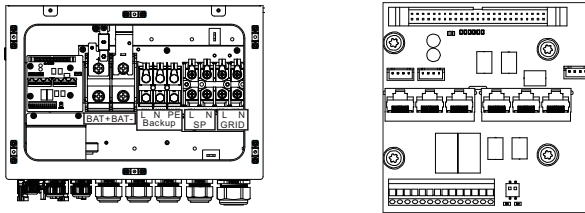


Figure 3.20 Communication terminals

| Terminal         | Type           | Description  |
|------------------|----------------|--|
| BMS              | RJ45           | Used for CAN communication between inverter and Lithium battery BMS. Used for Battery temperature sensor between inverter and lead-acid battery.   |
| Meter            |                | (Optional)Used for RS485 communication between inverter and the smart meter.   |
| DRM              |                | (Optional) To realize Demand Response or Logic Interface function, this function may be required in UK and Australia.  |
| RS485            |                | (Optional) Used for Modbus RTU communication with 3rd party external device or controller.   |
| P-A              |                | (Optional) Parallel operation communication port.  |
| P-B              |                | (Optional) Parallel operation communication port.  |
| DIP Switch (2-1) | -              | When a single inverter is running, DIP switch 1 and 2 shall be both at the bottom position.<br>When multiple inverters are paralleled, DIP switch: Both the first and last inverter (INV1 & INV6) have 2 DIP switches enabled (Both Pin1 & Pin2) |
| GEN-V            | Terminal Block | Pin 1 and pin 2 (from left to right) are used for the generator start-stop signal.   |
| GEN-S            |                | Reserved.  |
| GEN-DI           |                | Pin 5 & Pin 6 (from left to right) are used for the on-grid/ off-grid detection signal when the generator is connected to the grid side.   |
| CT               |                | Pin 9 & Pin 10 (from left to right) are used for CT wire connection.   |
| VCCA HS          |                | Pin 11 & Pin 12 (from left to right) are used for the control signal of the heat pump.   |
| VCC B HG         |                | Reserved.  |

## 3.10.3 BMS Terminal Connection

### 3.10.3.1 With Lithium Battery

CAN communication is supported between inverter and compatible battery models. Please lead the CAN cable through the COM1 or COM2 port of the inverter and connect to the BMS terminal with RJ45 connector.



#### NOTE:




Before connecting CAN cable with the battery, please check whether the communication pin sequence of the inverter and the battery match; If it does not match, you need to cut off the RJ45 connector at one end of the CAN cable and adjust the pin sequence according to the pin definitions of both inverter and battery.

Pin definition of the inverter BMS Port is following EIA/TIA 568B.

CAN-H on Pin 4: Blue

CAN-L on Pin 5: Blue/White

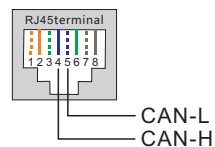

### 3.10.3.2 With Lead-acid Battery

When Lead-acid battery is used, battery temperature sensor needs to be connected to the BMS terminal of the inverter.


Step 1. Take out the battery temperature sensor cable and lead through the COM1 or COM2 port of the inverter and connect the RJ45 connector to the BMS terminal.

Step 2. Fasten the temperature sensor ring onto the battery module. If no suitable fastening terminal can be found on the battery module, the sensor ring can be attached to the positive or negative pole of the battery module.




## 3.10.4 Meter Terminal Connection (Optional)

If a smart meter is preferred to be installed other than the provided CT, please contact Solis sales rep to order the smart meter and corresponding meter CT.  
Please lead the Meter RS485 cable through the COM1 or COM2 port of the inverter and connect to the Meter terminal with RJ45 connector.

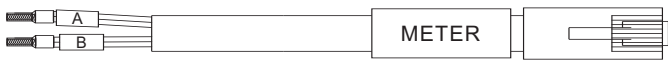

**NOTE:**  
Pin definition of the Meter Terminal is following EIA/TIA 568B.  
RS485A on Pin 1: Orange/white  
RS485B on Pin 2: Orange

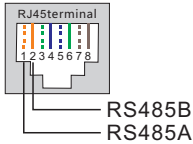


**NOTE:**  
Compatible Smart Meter Pin Definition.  
SDM120CTM (With CT) – Pin 9 is RS485B & Pin 10 is RS485A

## 3.10.5 DRM Port Connection (Optional)

### 3.10.5.1 For Remote Shutdown Function

Solis inverters support remote shutdown function to remotely control the inverter to power on and off through logic signals.  
The DRM port is provided with an RJ45 terminal and its Pin5 and Pin6 can be used for remote shutdown function.

| Signal              | Function                |
|---------------------|-------------------------|
| Short Pin5 and Pin6 | Inverter Generates      |
| Open Pin5 and Pin6  | Inverter Shutdown in 5s |

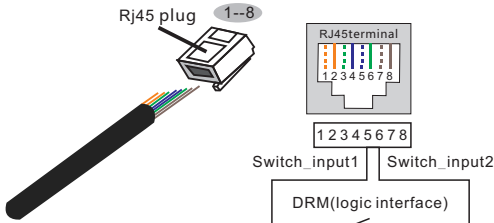

**Correspondence between the cables and the stitches of plug, Pin5 and Pin6 of RJ45 terminal is used for the logic interface, other Pins are reserved.**  
Pin 1: Reserved; Pin 2: Reserved  
Pin 3: Reserved; Pin 4: Reserved  
Pin 5: Switch\_input1; Pin 6: Switch\_input2  
Pin 7: Reserved; Pin 8: Reserved

Figure 3.21 Strip the insulation layer and connect to RJ45 plug

## 3.10.5.2 For DRED Control Function (For AU and NZ Only)

DRED means demand response enable device. The AS/NZS 4777.2:2020 required inverter need to support demand response mode(DRM).

This function is for inverter that comply with AS/NZS 4777.2:2020 standard.



A RJ45 terminal is used for DRM connection.

| Pin | Assignment for inverters capable of both charging and discharging | Pin | Assignment for inverters capable of both charging and discharging |
|-----|---|-----|---|
| 1   | DRM 1/5   | 5   | RefGen  |
| 2   | DRM 2/6   | 6   | Com/DRM0  |
| 3   | DRM 3/7   | 7   | V+  |
| 4   | DRM 4/8   | 8   | V-  |



**NOTE:**

Solis hybrid inverter is designed to provide 12V power for DRED.

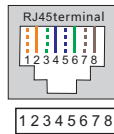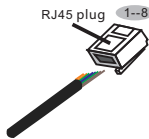

**Correspondence between the cables and the stitches of plug**

Pin 1: white and orange ; Pin 2: orange  
Pin 3: white and green; Pin 4: blue  
Pin 5: white and blue; Pin 6: green  
Pin 7: white and brown; Pin 8: brown

Figure 3.22 Strip the insulation layer and connect to RJ45 plug

## 3.10.6 RS485 Port Connection (Optional)

If a 3rd party external device or controller needs to communicate with the inverter, the RS485 port can be used. Modbus RTU protocol is supported by Solis inverters.

To acquire latest protocol document, please contact Solis local service team or Solis sales.




**NOTE:**

Pin definition of the RS485 Port is following EIA/TIA 568B.

RS485A on Pin 5: Blue/White

RS485B on Pin 4: Blue

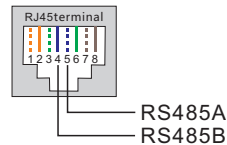

## 3.10.7 Parallel Terminal Connection (Optional)

Up to 6 units of the inverter can be connected in parallel.

Please connect the paralleled inverters in daisy chain by using P-A and P-B terminals.

Standard CAT5 with shielding layers internet cable can be used.



Figure 3.23 Parallel Terminal Connection

## 3.10.8 14-pin Communication Terminal Block

Terminal Block Connection Steps:

Step 1. Lead the wires through the hole in COM3 port (Hole Diameter: 2 mm)


Step 2. Strip the wires for 9mm length

Step 3. Use slot type screwdriver to press the block on the top

Step 4. Insert the exposed copper part of the cable into the terminal.

Step 5. Remove the screwdriver and the terminal will clamp down on the exposed copper part.

Step 6. Give the cable a gentle tug to ensure that it is firmly secured.

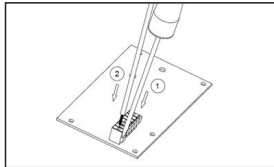

## 3.10.8.1 CT Terminal Connection

CT connection is necessary to realize the correct control logic of the hybrid inverter, unless the smart meter is used as stated in section 3.10.4 and section 3.9.

The CT provided in the inverter package has BLACK(S2) and WHITE(S1) wires. The BLACK wire needs to connect to the Pin 10 of the terminal block and the WHITE wire needs to connect to the Pin 9 of the terminal block as in the following diagram.

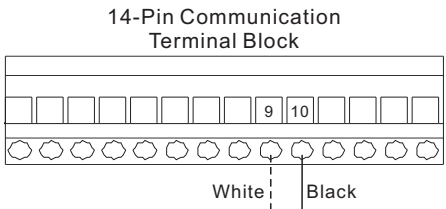


Figure 3.24

## 3.10.8.2 GEN-V Terminal Connection

The G-V terminal is a voltage-free dry contact signal for connecting with generator's NO relay to start up the generator when necessary.

When generator operation is not needed, Pin1 and Pin2 is in open circuit.

When generator operation is needed, Pin1 and Pin2 is in short circuit.



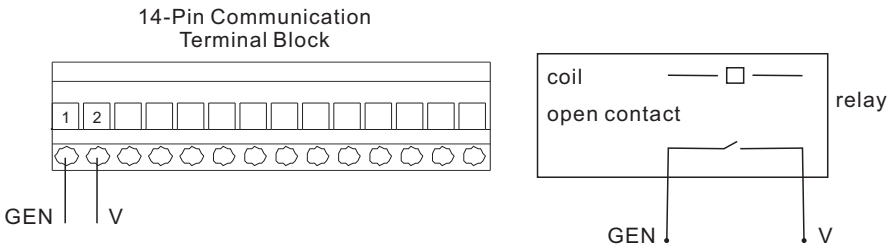


Figure 3.25

The GEN-DI terminal is used for the on-grid/off-grid detection signal when the generator is connected on the grid side. This terminal needs to be connected to the adapter to provide 5~12Vdc to this terminal.

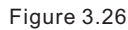

The VCCA HS terminal is a voltage-free dry contact signal for connecting with heat-pump. When heat-pump operation is not needed, Pin11 and Pin12 is in open circuit. When heat-pump operation is needed, Pin11 and Pin12 is in short circuit.

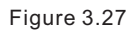



## 3.11 Inverter Remote Monitoring Connection

The inverter can be remotely monitored via WiFi, LAN or 4G.

The USB type COM port at the bottom of the inverter can connect to different kinds of Solis data loggers to realize the remote monitoring on Soliscloud platform.

To install Solis data loggers, please refer to corresponding user manuals of Solis data loggers.

The Solis data loggers are optional and can be purchased separately.

Dust cover is provided the inverter package in case the port is not used.



**WARNING:**

The USB type COM port is only allowed to connect Solis data loggers. It is forbidden to be used for other purposes.


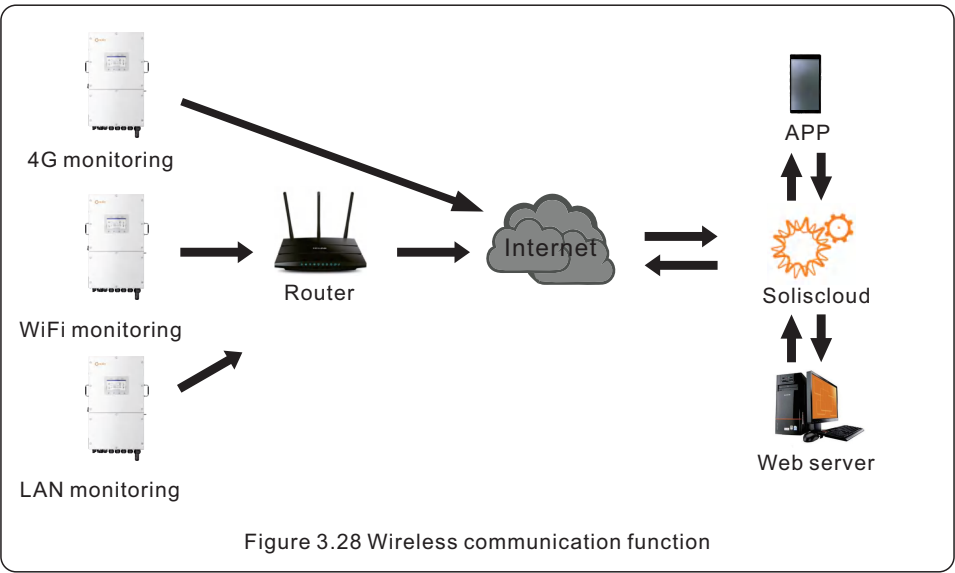


Figure 3.28 Wireless communication function

3.12 Wiring Diagram Overview

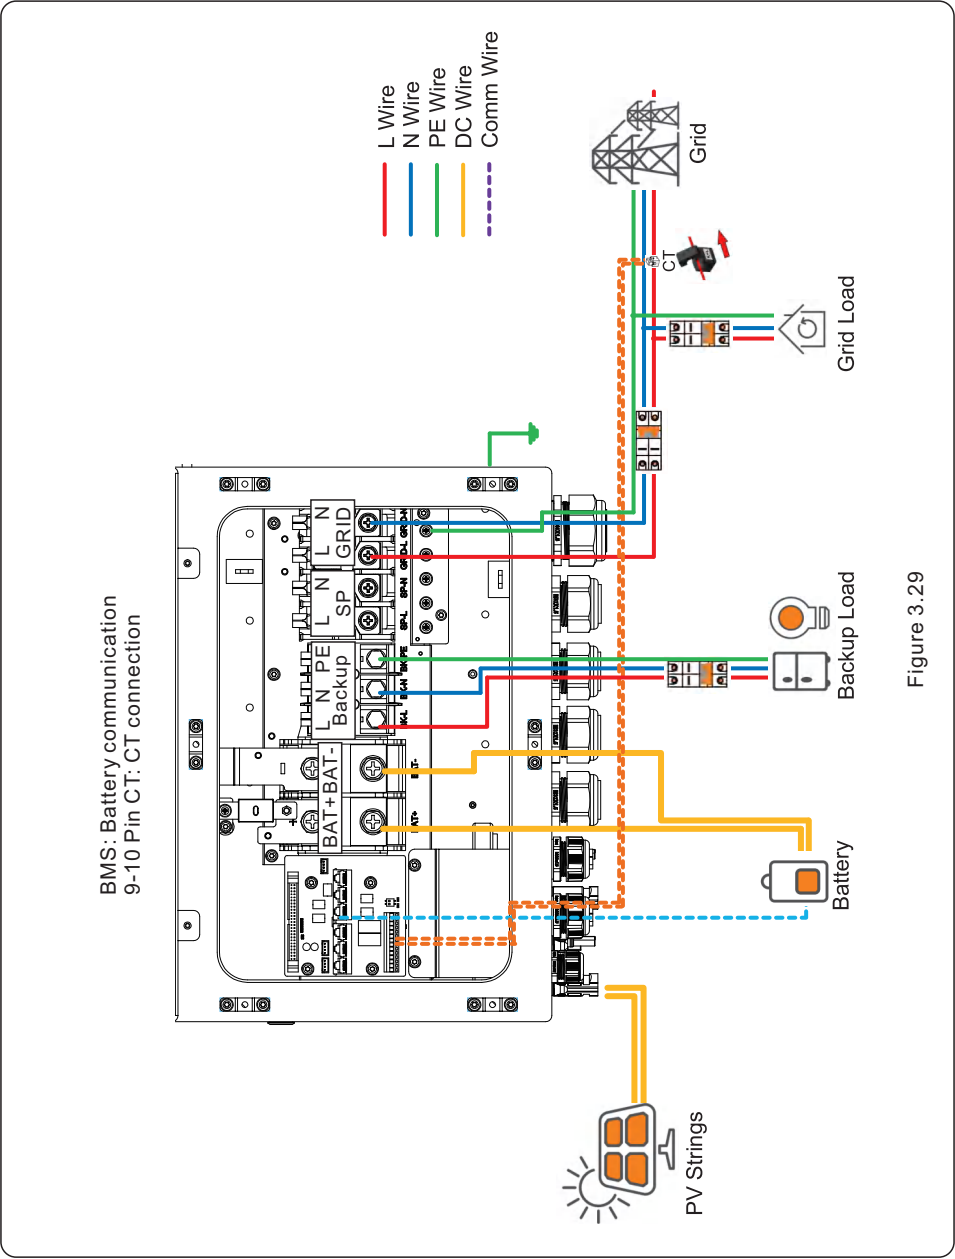

3.13 Generator on GEN port

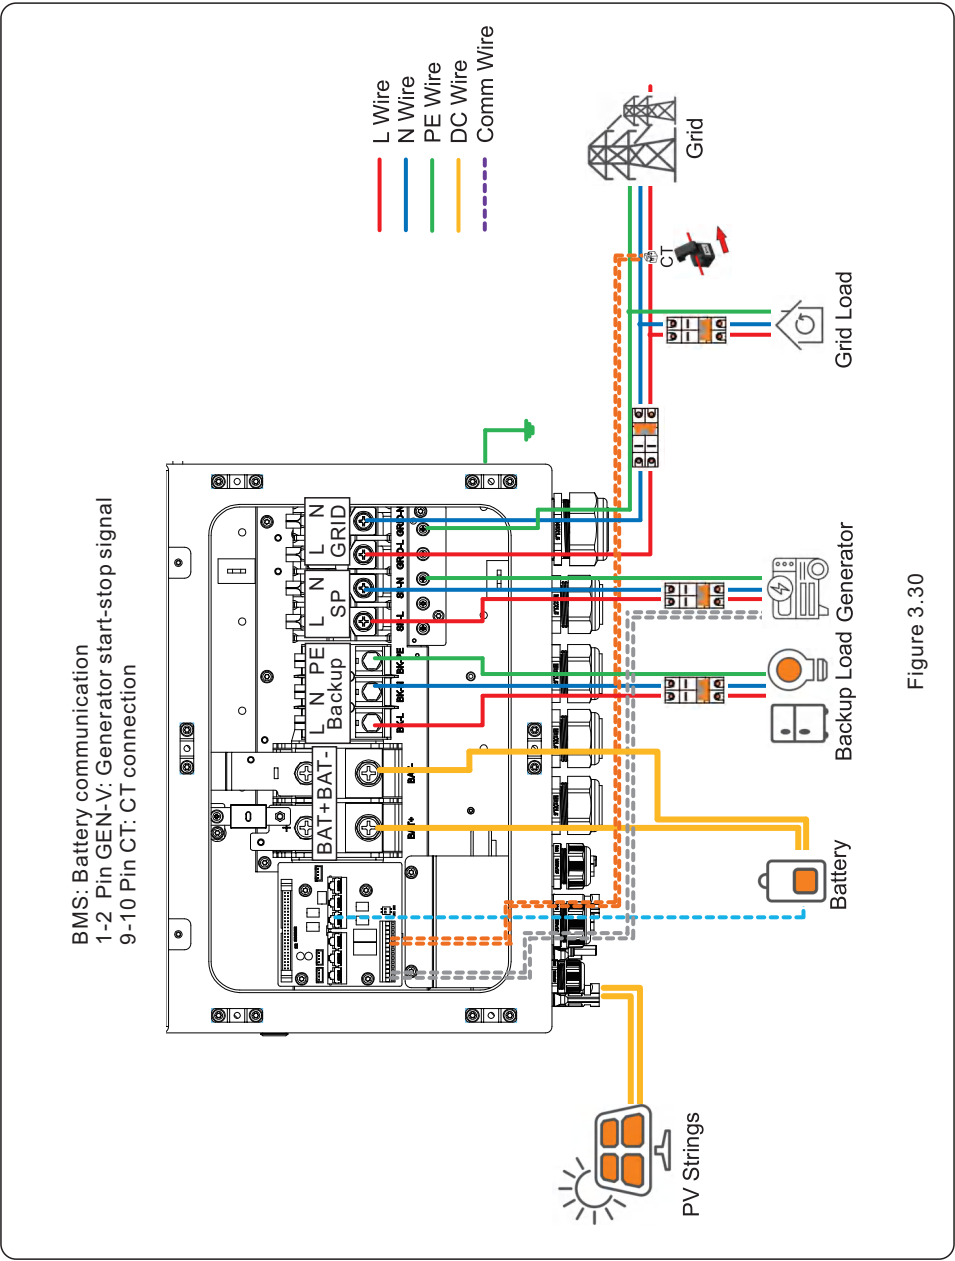



Figure 3.30




**NOTE**

The recommended power of generator is 1.0-1.5 times the rated power of the inverter when the generator is connected to the GEN port. However, generators with other power ratings can also be used, which may trigger generator shutdown due to the power of the backup load, but will not damage the generator or inverter.


Step: Home - System setting - Smart port - Genset input.

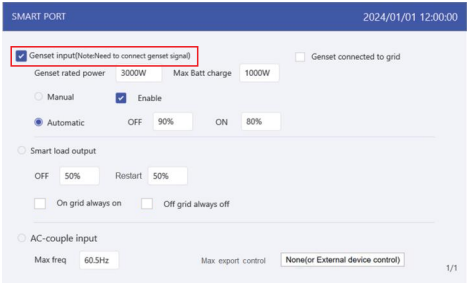


3.14 Generator on Grid side

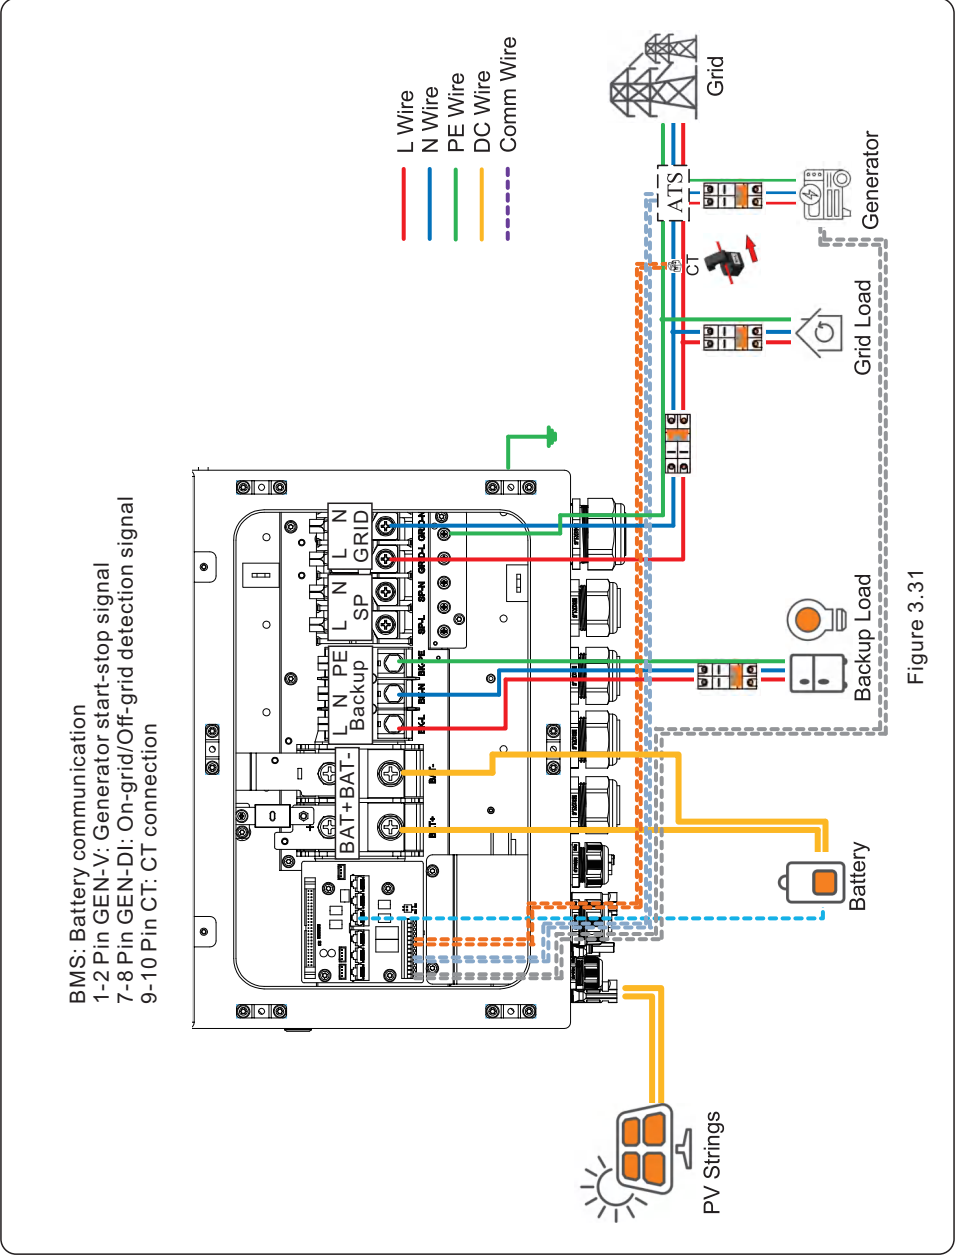

Step: Home - System setting - Smart port - Genset connected to grid

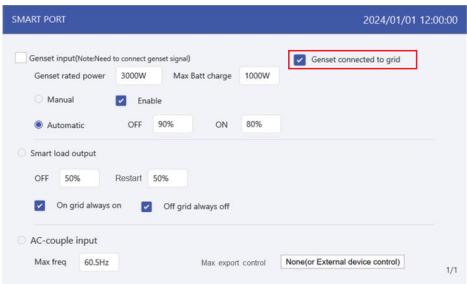


## 3.15 Parallel System Wiring Diagram

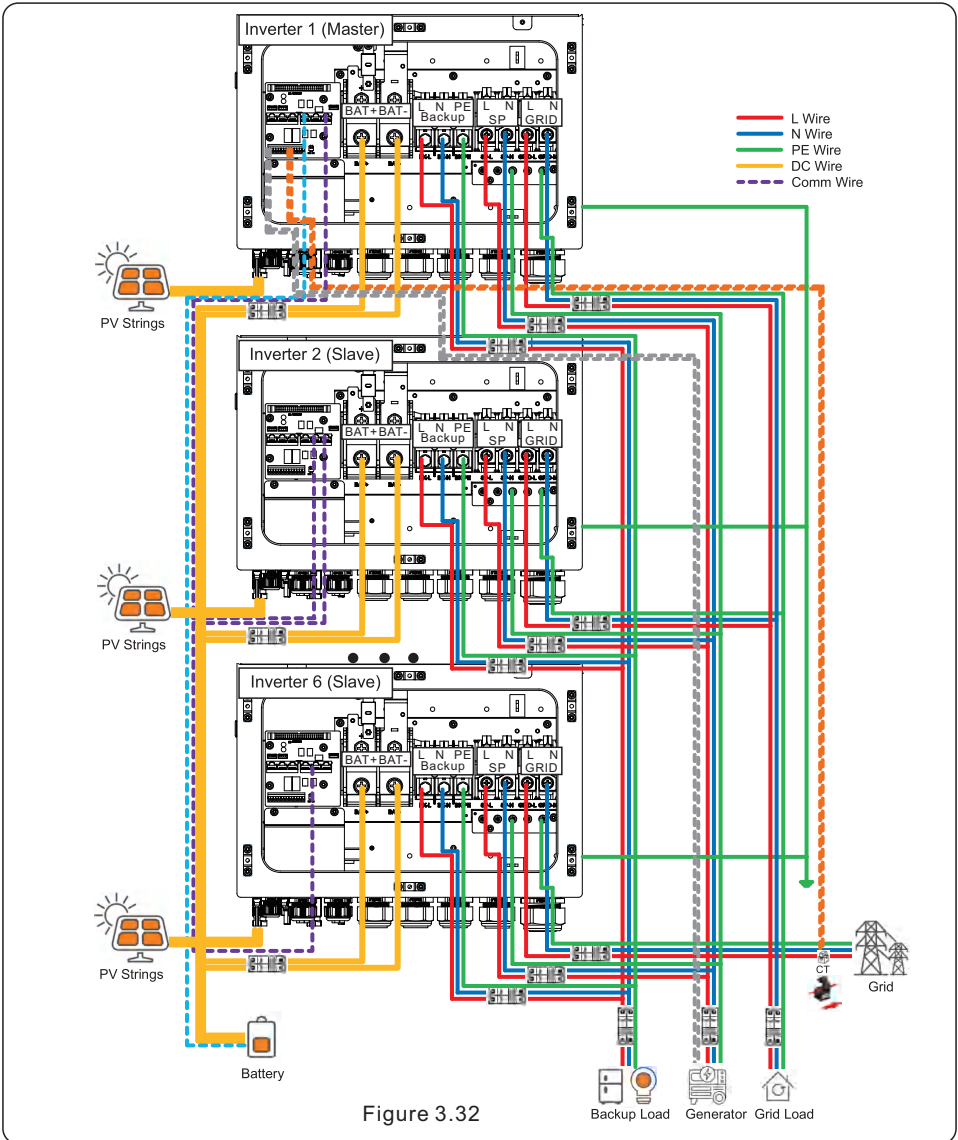

**NOTE**  
When three or more inverters are connected in parallel, please place an additional order for Meter: SDM120CTM(CT 600A/5A).

4.1 Screen

Solis S6 Series adopts 7 inch color screen, it displays the status, operating information and settings of the inverter.

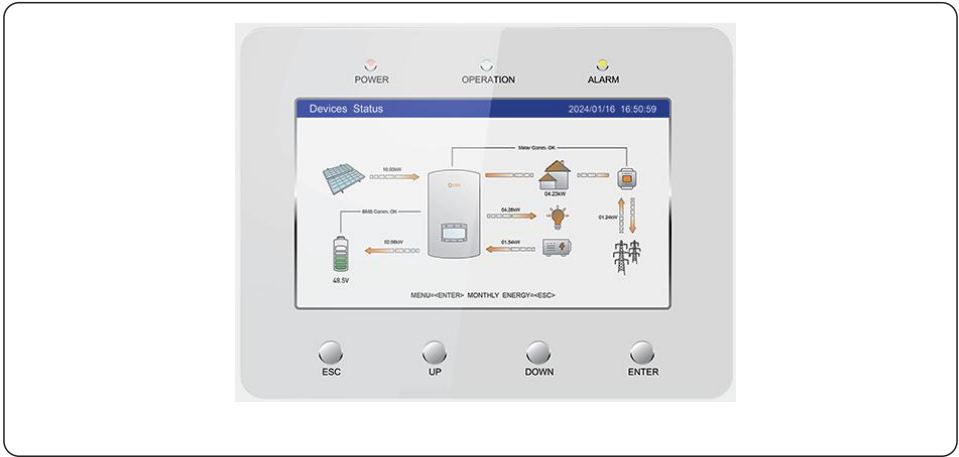

4.2 LED Indicators

There are three LED indicators on the inverter (Red, Green, and Orange) which indicate the working status of the inverter.

| <div><div><div></div><div>POWER</div></div><div><div></div><div>OPERATION</div></div><div><div></div><div>ALARM</div></div></div> |          |  |
|---|----------|--|
| Light   | Status   | Description  |
| <div><div></div><div>POWER</div></div>  | ON       | The inverter can detect power supply.                  |
|   | OFF      | No power.  |
| <div><div></div><div>OPERATION</div></div>  | ON       | The inverter is fully operational.                     |
|   | OFF      | The inverter has stopped operating.                    |
|   | FLASHING | The inverter is initializing.                          |
| <div><div></div><div>ALARM</div></div>  | ON       | The inverter has detected the emergency fault.         |
|   | OFF      | The inverter has not detected any faults.              |
|   | FLASHING | The inverter has detected the normal fault or warning. |

Table 4.1 Status Indicator Lights



### 4.3 Keypad

There are four keys in the front panel of the inverter (from left to right):

ESC, UP, DOWN and ENTER keys. The keypad is used for:

- Scrolling through the displayed options (the UP and DOWN keys);
- Access and modify the settings (the ESC and ENTER keys).



Figure 4.1 Keypad



**NOTE:**

The screen will be automatically turn off after being idle for a few minutes to save power, click any operation button("ESC"/"UP"/"DOWN"/ "ENTER") to restart the screen, then press"Enter"into the main operation interface.

### 4.4 Inverter built-in Bluetooth description

Blueooth: BDR、EDR、BLE

frequency band(s) in which the radio equipment operates:2.402-2.480GHZ

Maximum transmitting power: 8dBm

Hereby, Ginlong Technologies Co.,Ltd.declares that the radio equipment type hybrid inverter is in compliance with Directive 2014/53/EU

## 5.1 Pre-Commissioning

- Make sure that no high voltage conductors are energized.
- Check all conduit and cable connection points ensure they are tight.
- Verify that all system components have adequate space for ventilation.
- Follow each cable to ensure that they are all terminated in the proper places.
- Ensure that all warning signs and labels are affixed on the system equipment.
- Verify that the inverter is secured to the wall and is not loose or wobbly.
- Prepare a multimeter that can do both AC and DC amps.
- Have an Android or Apple mobile phone with Bluetooth capability.
- Install the Soliscloud APP on the mobile phone and register a new account.
- There are three ways to download and install the latest APP.

1.You can visit [www.soliscloud.com](http://www.soliscloud.com).



2.You can search"Soliscloud"in Google Play or APP Store.

3.You can scan this QR code to download Soliscloud.



## 5.2 Power ON

Step 1: With the DC switch off, energize the PV strings and then measure DC voltage of the PV strings to verify that the voltage and polarity are correct. Turn on the battery and check the battery voltage and polarity as well.

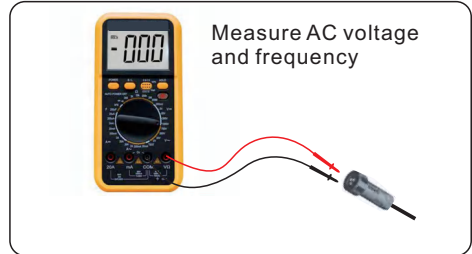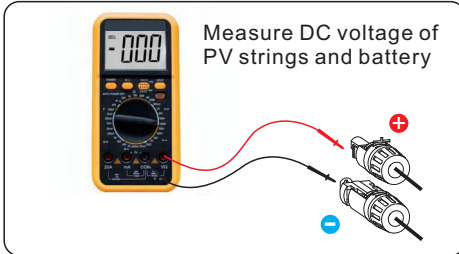

Step 2: Turn on the OCPD for the system and then measure the AC voltages line to line and line to neutral. The backup side of the system will be off until commissioning is complete. Turn the OCPD back off for now.

Step 3: Turn the DC switch on and then the OCPD(AC breaker) for the system.

This inverter can be powered on by PV only, battery only and Grid only.

When the inverter is powered on,the five indicators will be lighted at once.

## 5.3 Power OFF

Step 1: Turn off the AC breaker or AC disconnect switch to disable AC power to the inverter.

Step 2: Turn off the DC switch of the inverter.

Step 3: Turn off the battery breaker.

Step 4: Use a multimeter to verify that the battery and AC voltages are 0V.

## 5.4 HMI Screen Setting

### 5.4.1 HMI Quick Setting

If this is the first time the inverter has been commissioned, you will need to first go through the Quick Settings. Once this has been done, these settings can be changed later.

**Inverter Time -> Meter Setting -> Grid Code -> Storage mode -> Battery Model**

The screenshot shows the 'QUICK SETUP' screen with a timestamp of 2024/01/01 12:00:00. It is divided into four main sections: 1. Inverter time: Fields for Year (2024), Month (01), Day (01), Hour (12), Minute (00), and Second (00). 2. CT/METER settings: Radio buttons for 'CT' (selected) and 'METER', a dropdown for 'Easton 1P', and input fields for 'Location' (Grid), 'Direction' (forward), and 'CT ratio' (4000:1). 3. Grid settings: A dropdown for 'Grid code' showing 'G95'. 4. Storage mode: Radio buttons for 'Self-use', 'Selling first' (selected), and 'Off grid'. Below these are input fields for 'Max export power' (200W), 'Export calibration' (20W), and 'Grid Peak shaving' (2000W). A 'NEXT' button is at the bottom right.

#### 1. Inverter time:

Set inverter time and date.

#### 2. CT/Meter setting:

Select the CT or Meter, Solis provide ESCT-TA16-100A/50mA CT as standard, and customers can select the meter as an option. If there is no meter connected for the moment, please select "No Meter" to avoid alarms.

Location: Default Grid side.

Direction: Default Forward. The CT installation direction is towards the grid.

CT ratio: Default 2000:1. If the system connected to Meter, then CT ratio need to be set on Meter.

#### 3. Grid code:

Select grid code that meet the local regulations.

#### 4. Storage mode:

All modes first priority is to use the available PV power to power loads. The different modes determine the second priority, which is whether to use excess PV power to charge the battery or feed the grid.

Self-use/Selling first/off grid are exclusive, and users can only select one mode.

| Mode          | Description  |
|---------------|--|
| Self-use      | <p>PV power consumption priority: load &gt; battery &gt; grid.<br/>In this mode, The PV power supplies to the load preferentially, and the excess power is charged to the battery.</p> <p>If "Allow export" enabled, when the battery is fully charged, or there is no battery, the excess PV power will feed the grid.</p> <p>If "Allow export" disabled, then the inverter will curtail the PV power according to the power of the load.</p> |
| Selling first | <p>PV power consumption priority: load &gt; grid &gt; battery.<br/>In this mode, The PV power supplies to the load preferentially, and the excess power will feed the grid. If the export power quota has been met, the excess PV power will charge the battery.</p> <p>Note: This mode should not be used if export power set to zero.</p>  |
| Off grid      | <p>PV power consumption priority: load &gt; battery.<br/>This mode applies the area not covered by the grid or the system is not connected to the grid.<br/>When the power outage is detected, the system will automatically enter the off-grid mode, supplying only the backup load.</p>  |

Table 1 Description of modes

Under each mode, user could set other functions based on their requirements.

| Settings           | Description   |
|--------------------|---|
| Max export power   | Limit the maximum power sold to the grid.   |
| Export calibration | <p>Range : -500w-500w, default 20w, settable.<br/>To compensate the deviation of CT/Meter in practical application.</p>   |
| Grid peak shaving  | <p>Default enable, default 2 times of rated power.<br/>Limit the power drawn from the grid to prevent from exceeding regulatory requirements or the power line capacity.<br/>When the grid supplies power to the load while charging the battery, it will limit the power used to charge the battery, so that the total power does not exceed the set value.<br/>If the grid only supplies power to the load and does not charging the battery, it is not limited by the setting value.</p> |

Table 2 Description of mode settings

**5. Battery setting:**

If the connected communication lithium battery is on the battery matching list but not found in the model list, you need to select Lithium Battery LV.

Set Max charging/discharging current.

QUICK SETUP

2024/01/01 12:00:00

Batt settings

☒ Lithium Battery

PYLON\_LV

>

☐ 48.0V Lithium Battery (Without COMM)

☐ 51.2V Lithium Battery (Without COMM)

☐ Lead-acid Battery

☐ No Battery

Max charging current


100A

Max discharging current

100A

FINISH


5.4.2 HMI screen operation system overview

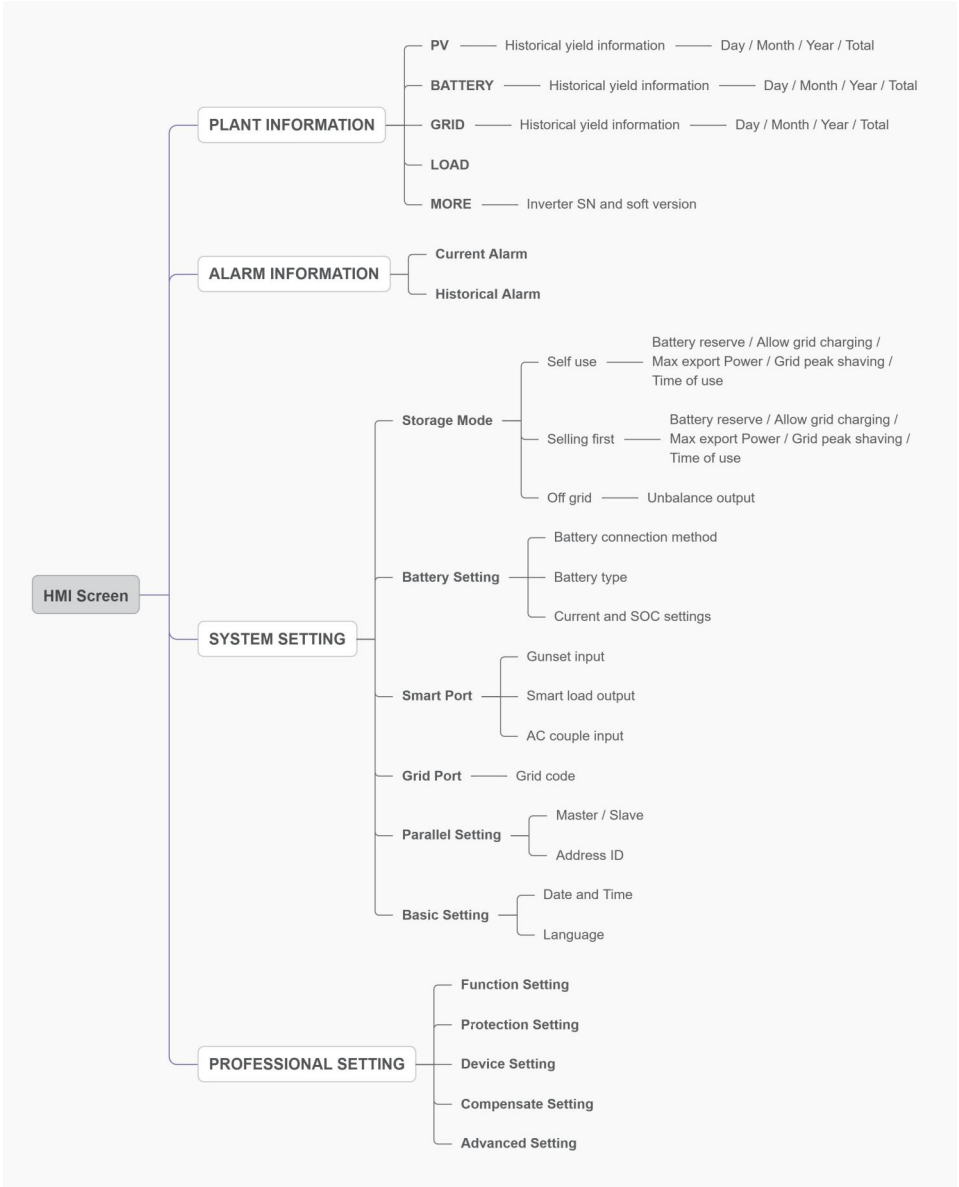

## 5.4.3 Detailed System Setting

### Step 1: Enter Home page

After quick setting, press “ENTER”, the screen displays the home page.

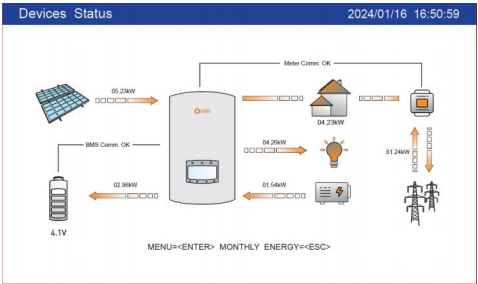

### Step 2: Enter “SYSTEM SETTING” interface

Press “Down”, then press “ENTER” into the “SYSTEM SETTING” interface.



## Step 3: Set “Storage Mode”

Use “UP” or “DOWN” key to select the desired mode, then press “ENTER”.

The Mode description please refer to 5.4.1.

STORAGE MODE

2024/01/01 12:00:00

Storage mode

☐ Self-use

☒ Allow export

☒ Selling first

☐ Off grid

☒ Batt reserved

80%

☒ Allow grid charging

Max export power

200W

Export power calibration

20W

☒ Grid Peak shaving

2000W

1/2

| Settings            | Description  |
|---------------------|--|
| Battery reserve     | Range: 20~100%, default: 80%, settable.<br>If the grid is connected, the battery will not discharge when the battery SOC is lower than the Battery reserve SOC. When in the off-grid mode, the battery will discharge normally.  |
| Allow grid charging | Allow grid charging the battery when it enables.<br>Notice: if “Allow Grid Charging” is turned on, the inverter will use grid power to charge the battery only under two circumstances:<br>The battery drains to the Force Charge SOC.<br>When PV power output can't meet the set current value during the charge periods.   |
| Allow export        | If "Allow export" is enabled, when the battery is fully charged or there is no battery, the excess PV power will supply to the grid.<br>If "Allow export" is disabled, the inverter will reduce the PV power according to the load's power.  |
| Max export power    | Default: rated power.  |
| Export calibration  | Range : -500w-500w, default 20w, settable.<br>To compensate the deviation of CT/Meter in practical application.  |
| Grid peak shaving   | Default enable, default 2 times of rated power.<br>Limit the power drawn from the grid to prevent from exceeding regulatory requirements or the power line capacity.<br>When the grid supplies power to the load while charging the battery, it will limit the power used to charge the battery, so that the total power does not exceed the set value.<br>If the grid only supplies power to the load and does not charging the battery, it will be not limited by the setting value. |

Table 3 Description of storage mode settings





**NOTE:**

Solis's export power control function is based on the sampling results from the smart meter or smart CT. Due to the sampling interval limitation, when the system's load consumption has sudden changes, small amount of export overshooting is expected. For strict zero injection applications, it is suggested to install external backflow trip device as additional protection for injection.

**Step 4: Set "Time of use" under each mode (Skip this step if no need)**

Time of Use is for manual control of the battery charging/discharging. When the time is between Start and Stop, the system will charge/discharge the battery according to the set Current until the set "SOC/voltage" is reached.

1. Charge period: battery charges with set current value until the charging cut-off voltage (settable), selecting the box to control whether enable this charging period.
2. Discharge period: battery discharges with set current value until the discharging cut-off voltage (settable), selecting the box to control whether enable this discharging period.

STORAGE MODE

2024/01/01 12:00:00

Charge period

|                                     | Start   | Stop    | Current | SOC |
|-------------------------------------|---------|---------|---------|-----|
| <input checked="" type="checkbox"/> | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input type="checkbox"/>            | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input checked="" type="checkbox"/> | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input type="checkbox"/>            | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input checked="" type="checkbox"/> | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input type="checkbox"/>            | 01 : 00 | 05 : 00 | 100A    | 50% |

Discharge period

|                                     | Start   | Stop    | Current | SOC |
|-------------------------------------|---------|---------|---------|-----|
| <input checked="" type="checkbox"/> | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input type="checkbox"/>            | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input checked="" type="checkbox"/> | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input type="checkbox"/>            | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input checked="" type="checkbox"/> | 01 : 00 | 05 : 00 | 100A    | 50% |
| <input type="checkbox"/>            | 01 : 00 | 05 : 00 | 100A    | 50% |

2/2



**NOTE:**

The set current value is the maximum current for charging/discharging the battery. However, the actual charging and discharging current may not reach this value due to the influence of other factors, such as the maximum charging/discharging power limitation of the inverter, the battery BMS limitation, etc.

## Step 5: Set “Battery Setting”

BATTERY SETTING2024/01/01 12:00:00

Batt type

Lithium Battery

PYLON\_LV

48.0V Lithium Battery (Without COMM)

51.2V Lithium Battery (Without COMM)

Lead-acid Battery

No Battery

Max charge current

100A

Max discharge current

100A

Over discharge

80%

Recovery

80%

Force charge

80%

Max charge SOC

80%

☒ Battery saving

1/2

| Settings              | Description   |
|-----------------------|---|
| Max charge current    | Max charge current, settable.   |
| Max discharge current | Max discharge current, settable.  |
| Over discharge        | Range: 5~40%, default 20%,<br>When the battery SOC/Voltage < Over discharge SOC/Voltage, the battery will not discharge to the load.  |
| Recovery              | Range: set Over discharge value + 1% ~ set Over discharge value + 20%;<br>The battery can discharge when the SOC/Voltage reaches the set value. Avoid repeated changes in the charging and discharging status of the battery. |
| Force charge          | The battery will be charged to the over discharge SOC/Voltage when it reaches this setting.   |
| Max charge SOC        | The maximum SOC/Voltage that the battery can be charged to. Default 100%.   |
| Battery saving        | If enable, the self-power consumption of the inverter will be powered by the grid rather than the battery.  |

Table 4 Description of battery mode settings



**NOTE:**

Force charge SOC < Over discharge SOC < Recovery SOC, otherwise the setting might be error.



**NOTE:**

For lead-acid or non-communicated lithium batteries, Solis hybrid inverters are using measured battery voltage to estimate the battery's state of charge (SOC). Due to measurement accuracy and different batteries' behaviours, Solis's estimated battery SOC parameter is for reference only. Solis does not guarantee the accuracy for this parameter.

BATTERY SETTING

2024/01/01 12:00:00

Batt capacity

1000Ah

Equalizing charge voltage

20V

Floating charge voltage

20V

Equalization voltage

20V

Equalization interval days

10days

Equalization hours

3hours

Temp co.

30mV/°C/cell

2/2

| Settings                   | Description  |
|----------------------------|--|
| Batt capacity              | The value depends on the actual battery capacity.  |
| Equalizing charge voltage  | The three stages of battery charging:<br>Constant Current Charging -- Constant Voltage Charging -- Float Charging<br>You do not need to set this parameter.  |
| Floating charge voltage    |  |
| Equalization voltage       | Charge the battery to <b>Equalization voltage</b> during the <b>Equalization hours</b> . Ensure that each battery cell is charged to the battery equalization state.<br>After each <b>Equalized Interval days</b> , equalization charging will be performed again. |
| Equalization interval days |  |
| Equalization hours         |  |
| Temp co.                   | Temperature compensation coefficient. You do not need to set this parameter.   |

## Step 6: Set “Grid Port”

(Skip this step if grid code is already set in quick setting)

Select grid code that meet the local regulations.

GRID PORT

2024/01/01 12:00:00

Grid code

G95

☒ Grid Neutral Connection

HV1

255.5V

--

0.1s

HV1\_T

HV2

260.0V

--

0.1s

HV2\_T

HV3

265.0V

LV1

250.0V

--

0.1s

LV1\_T

LV2

250.0V

--

0.1s

LV2\_T

LV3

250.0V

HF1

50.0Hz

--

0.1s

HF1\_T

HF2

51.0Hz

--

0.1s

HF2\_T

HF3

52.0Hz

LF1

49.0Hz

--

0.1s

LF1\_T

LF2

48.0Hz

--

0.1s

LV2\_T

LF3

47.0Hz

1/2

## Step 7: Set “Smart Port”

(Skip this step if the system is not connected to generators)

When it is connected to Generator, select “Gunset input”;

When it is connected to smart load, select “Smart load output”

When it is connected to Grid-tied inverter, select “AC coupled”

After connecting the generator to the distribution panel, connect it to the GEN port of the inverter. The inverter should monitor the SPD in the distribution panel and be able to report an error when the SPD is damaged.

| Settings                 | Description   |
|--------------------------|---|
| Genset input             | The generator is connected to the GEN port.   |
| Genset connected to grid | The generator is connected to the Grid port.  |
| Manual/Enable            | If you want to manually control the start and stop of the generator, you need to select manual.<br>When you need to start the generator, please select Enable.  |
| Automatic OFF/ON         | If Automatic is selected, the generator will start when the battery SOC drops to the ON value, and stop when the SOC value reaches the OFF value.   |
| Smart load output OFF/ON | The load is connected to the GEN port as smart load.<br>When the battery SOC/Volt drops to the OFF SOC/Volt, the system will cut off the power of smart load to ensure sufficient power for Backup load. When the battery SOC/Volt reaches the ON SOC/Volt, the smart port will supply power to smart load. |
| On grid always on        | On grid always on: smart port will always supply power to smart load when the grid is available.  |
| Off grid always off      | Off grid always off: smart port will cut off power supply to smart load when the grid is off.   |
| AC couple input          | The external grid-tied inverter is connected to the GEN port. The hybrid uses Freq-Watt to modulate the output of the PV inverter. Please consult with the PV inverter’s manufacturer to confirm the correct setting procedures of its Freq-Watt response first.  |
| Max export control       | If you want to realize EPM function of the whole system, please select Based on Export power & SOC.   |

## Step 8: Set parallel system

PARALLEL SYSTEM

2024/01/01 12:00:00

☒ Parallel system

Master-slave setting

☒ Master

☐ Slave

ID

1

Phase connected setting

☒ Single-phase system

Three-phase system

☐ L1 phase

☐ L2 phase

☐ L3 phase

1/1

| Settings                                   | Description   |
|--|---|
| Parallel system                            | When the system is parallel, it needs to be selected.   |
| Master-slave setting                       | The first inverter must be set as the Master.   |
| ID   | The first inverter address is set to 1, the second to 2, and so on. The address of the master must be 1. (Note: The address cannot be set to 0) |
| Single-phase system/<br>Three-phase system | Multiple parallel modes are provided, including Single-phase parallel system and three-phase system forming.                                    |
| L1phase/<br>L2phase/<br>L3phase/           | If it is three-phase parallel system, please select which phase the inverter is connected to.   |


## 5.5 APP Setting

### 5.5.1 Log in the APP via Bluetooth


#### Step 1: Connect with Bluetooth.

Turn on Bluetooth switch on your mobile phone and then open the Soliscloud APP.

Click "More Tools"->"Local Operation"->"Connect with Bluetooth"

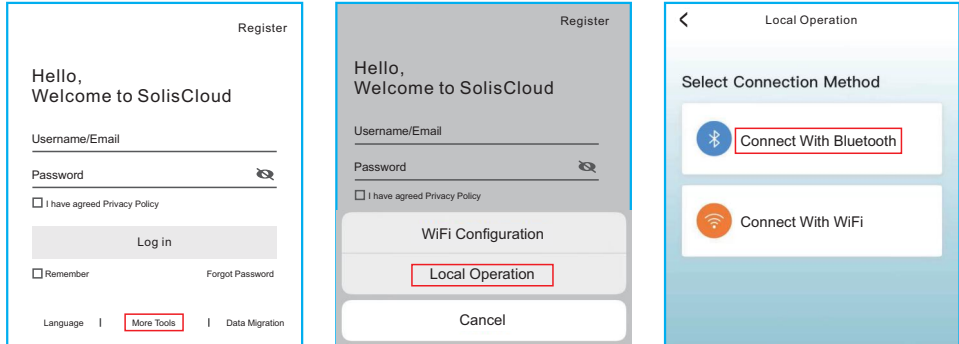


#### Step 2: Select the Bluetooth signal from the inverter. (Bluetooth Name: Inverter SN)

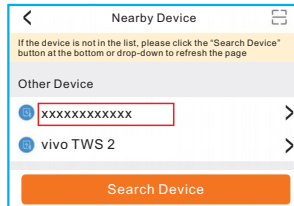

#### Step 3: Login account.

If you are the installer, please select the account type as Installer. If you are the plant owner, please select the account type as owner. Then set your own initial password for control verification. (The first log-in must be finished by installer in order to do the initial set up)

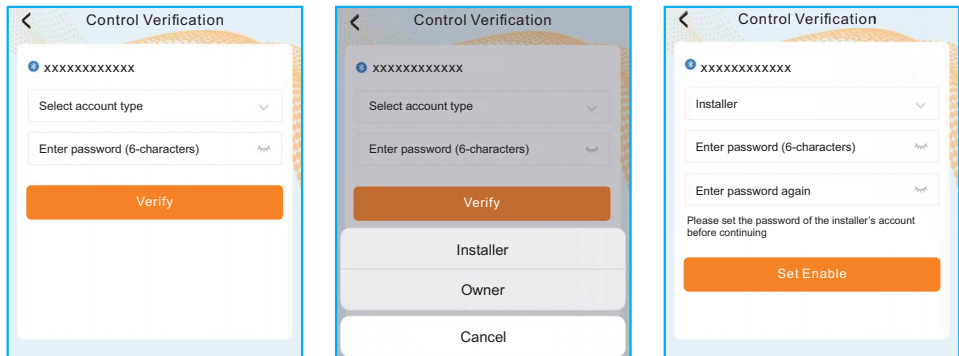


## 5.5.2 APP Quick Setting


If this is the first time the inverter has been commissioned, you will need to first go through the Quick Settings. Once this has been done, these settings can be changed later.

**Inverter Time -> Battery Model -> Meter Setting -> Grid Code -> Work mode**

A. Inverter Time: Set the Inverter Time and Date. It may be easier to tap the slider next to "Follow Phone Time". Then tap Next in the top right corner. This will set the inverter to match your phone.

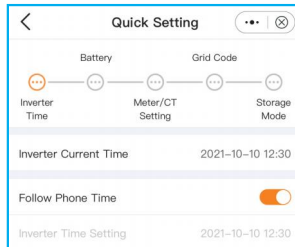

B. If the connected communication lithium battery is on the battery matching list but not found in the model list, you need to select Lithium Battery LV. Set Max charging/discharging current.

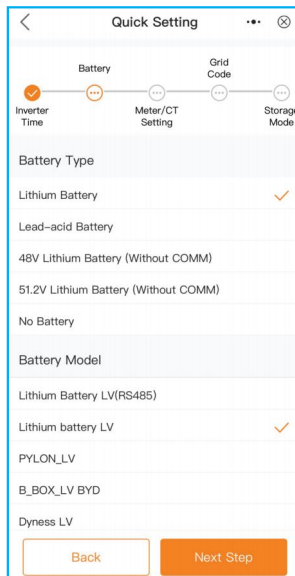


C. Select the CT or Meter, Solis provide ESCT-TA16-100A/50mA CT as standard, and customers can select the meter as an option. If there is no meter connected for the moment, please select "No Meter" to avoid alarms.


Location: Default Grid side.

Direction: Default Forward. The CT installation direction is towards the grid.

CT ratio: Default 2000:1. If the system connected to Meter, then CT ratio need to be set on Meter.

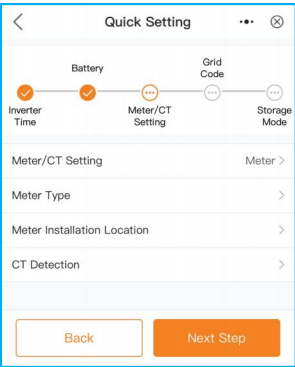


D. Select grid code that meet the local regulations.

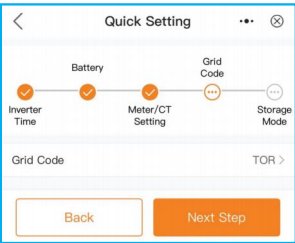



E. All modes first priority is to use the available PV power to power loads. The different modes determine the second priority, which is whether to use excess PV power to charge the battery or feed the grid.

Self-use/Selling first/off grid are exclusive, and users can only select one mode.

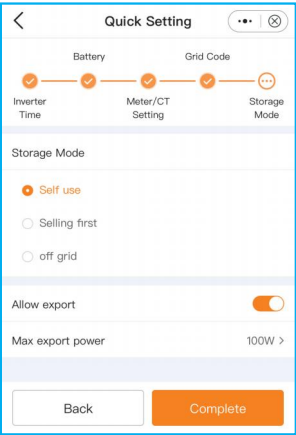

Solis S6 Series inverter does not require any regular maintenance. However, cleaning the heatsink will help the inverter dissipate heat and increase the lifetime of inverter. The dirt on the inverter can be cleaned with a soft brush.



**CAUTION:**

Do not touch the surface when the inverter is operating. Some parts may be hot and could cause burns. Turn OFF the inverter and let it cool down before you do any maintenance or cleaning of inverter.

The Screen and the LED status indicator lights can be cleaned with cloth if they are too dirty to be read.



**NOTE:**

Never use any solvents, abrasives, or corrosive materials to clean the inverter.

## 6.1 Smart O&M

In order to improve our products and provide you with higher quality services, this device has a built-in data logging module for collecting relevant information during operation (such as power generation data, fault data)

**Commitment:**

1. We will only collect, use and process your device information for the purpose of improving our products and services.
2. We will take all reasonable and feasible measures to ensure that no irrelevant information is collected and we will protect your device information.
3. We will not share, transfer or disclose the collected device information with any company, organization or individual.
4. When we stop operating products or services, we will stop collecting your device information in a timely manner.
5. If you do not want to provide such information, you can notify our company to turn off this function, which will not affect your normal use of other functions of the product.

| Message Name  | Information Description                         | Troubleshooting Suggestion  |
|---------------|---|---|
| Off           | Control device to shutdown                      | 1. Turn on the device in the ON/OFF Setting.  |
| LmtByEPM      | The device's output is under controlled         | <ol style="list-style-type: none"> <li>1. Confirm whether the inverter is connected to an external EPM/meter to prevent reverse current.</li> <li>2. Confirm whether the inverter is controlled by an external third-party device.</li> <li>3. Confirm whether the power setting of the inverter power control is limited.</li> <li>4. Verify settings in section 6.6.7 and check your meter readings.</li> </ol>   |
| LmtByDRM      | DRM Function ON                                 | 1. No need to deal with it.   |
| LmtByTemp     | Over temperature power limited                  | 1. No need to deal with it, the device is in normal operation.  |
| LmtByFreq     | Frequency power limited                         |   |
| LmtByVg       | The device is in the Volt-Watt mode             | <ol style="list-style-type: none"> <li>1. Due to the requirements of local safety regulations, when the grid voltage is high, the Volt-watt working mode is triggered, which generally does not need to be dealt with.</li> <li>2. Inverter factory test errors causing this mode to open, if you need to close, you can close this mode in LCD, set the process: Main menu → Advanced Settings → Password 0010 → STD mode settings → Working Mode → Working mode: NULL → Save and exit.</li> </ol> |
| LmtByVar      | The device is in the Volt-Var mode of operation | <ol style="list-style-type: none"> <li>1. Due to the requirements of local safety regulations, when the grid voltage is high, the Volt-watt working mode is triggered, which generally does not need to be dealt with.</li> <li>2. Inverter factory test errors causing this mode to open, if you need to close, you can close this mode in LCD, set the process: Main menu → Advanced Settings → Password 0010 → STD mode settings → Working Mode → Working mode: NULL → Save and exit.</li> </ol> |
| LmtByUnFr     | Under frequency limit                           | 1. No need to deal with it.   |
| Standby       | Bypass run                                      |   |
| StandbySynoch | Off grid status to On grid status               |   |
| GridToLoad    | Grid to load                                    |   |

| Message Name | Information Description                          | Troubleshooting Suggestion   |
|--------------|--|--|
| Surge Alarm  | On-site grid surge                               | 1. Grid side fault, restart the device.<br>If it is still not eliminated, please contact the manufacturer's customer service.                                      |
| OV-G-V01     | Grid voltage exceeds the upper voltage range     | 1. Confirm whether the power grid is abnormal.<br>2. Confirm that the AC cable is properly connected.<br>3. Restart the system and check if the fault persists.    |
| UN-G-V01     | Grid voltage exceeds the lower voltage range     |  |
| OV-G-F01     | Grid frequency exceeds the upper frequency range |  |
| UN-G-F01     | Grid frequency exceeds the lower frequency range |  |
| G-PHASE      | Unbalanced grid voltage                          |  |
| G-F-GLU      | Grid voltage frequency fluctuation               |  |
| NO-Grid      | No grid  |  |
| OV-G-V02     | Grid transient overvoltage                       |  |
| OV-G-V03     | Grid transient overvoltage                       | 1. Restart the system, confirm if that the fault continues.  |
| IGFOL-F      | Grid current tracking failure                    | 1. Confirm whether the power grid is abnormal.<br>2. Confirm that the AC cable is properly connected.<br>3. Restart the system and check if the fault persists.    |
| OV-G-V05     | Grid voltage RMS instantaneous overvoltage fault |  |
| OV-G-V04     | Grid voltage exceeds the upper voltage range     |  |
| UN-G-V02     | Grid voltage exceeds the lower voltage range     |  |
| OV-G-F02     | Grid frequency exceeds the upper frequency range |  |
| UN-G-F02     | Grid frequency exceeds the lower frequency range |  |
| NO-Battery   | Battery is not connected                         | 1. Check on information page 1 – Verify the battery voltage is within standards.<br>2. Measure battery voltage at plug.  |
| OV-Vbackup   | Inverting overvoltage                            | 1. Check whether the backup port wiring is normal<br>2. Restart the system, confirm that the fault continues.  |
| Over-Load    | Load overload fault                              | 1. Backup load power is too large, or some inductive load startup power is too large, need to remove some backup load, or remove the inductive load on the backup. |

# 7. Troubleshooting

| Message Name                   | Information Description              | Troubleshooting Suggestion   |
|--------------------------------|--------------------------------------|--|
| BatName-FAIL                   | Wrong battery brand selection        | 1. Confirm whether the battery model selection is consistent with the actual one.  |
| CAN Fail                       | CAN Fail                             | 1. Can failure is a failure of communication between inverter and battery. Check cable conditions. Check to ensure you have it plugged in on the CAN port of the battery and inverter. Check that you are using the right cable. Some batteries require a special battery from the battery manufacturer. |
| OV-Vbatt                       | Battery overvoltage detected         | 1. Verify battery voltage is within standards. Measure battery voltage at inverter connection point. Contact your battery manufacturer for further service.  |
| UN-Vbatt                       | Battery undervoltage detected        | 1. Restart the system and check if the fault persists. If it is still not eliminated, please contact the manufacturer's customer service.  |
| Fan Alarm                      | Fan alarm                            | 1. Check if the internal fan is working correctly or jammed.   |
| OV-DC01<br>(1020 DATA:0001)    | DC 1 input overvoltage               | 1. Check if the PV voltage is abnormal<br>2. Restart the system, confirm that the fault continues  |
| OV-DC02<br>(1020 DATA:0002)    | DC 2 input overvoltage               |  |
| OV-BUS<br>(1021 DATA:0000)     | DC bus overvoltage                   | 1. Restart the system, confirm that the fault continues.   |
| UN-BUS01<br>(1023 DATA:0001)   | DC bus undervoltage                  |  |
| UNB-BUS<br>(1022 DATA:0000)    | DC bus unbalanced voltage            |  |
| UN-BUS02<br>(1023 DATA:0002)   | Abnormal detection of DC bus voltage |  |
| DC-INTF.<br>(1027 DATA:0000)   | DC hardware overcurrent (1, 2, 3, 4) | 1. Check if the DC wires are connected correctly without loose connection.   |
| OV-G-I<br>(1018 DATA:0000)     | Aphase RMS value overcurrent         | 1. Confirm that the grid is abnormal.<br>2. Confirm that the AC cable connection is not abnormal.<br>3. Restart the system, confirm that the fault continues.  |
| OV-DCA-I<br>(1025 DATA:0000)   | DC 1 average overcurrent             | 1. Restart the system, confirm that the fault continues.   |
| OV-DCB-I<br>(1026 DATA:0000)   | DC 2 average overcurrent             |  |
| GRID-INTF.<br>(1030 DATA:0000) | AC hardware overcurrent (abc phase)  |  |

# 7. Troubleshooting

| Message Name                                | Information Description                     | Troubleshooting Suggestion  |
|---|---|---|
| DCInj-FAULT<br>(1037 DATA:0000)             | The current DC component exceeds the limit  | <ol style="list-style-type: none"> <li>1. Confirm that the grid is abnormal.</li> <li>2. Confirm that the AC cable connection is not abnormal.</li> <li>3. Restart the system, confirm that the fault continues.</li> </ol> |
| IGBT-OV-I<br>(1048 DATA:0000)               | IGBT overcurrent                            | <ol style="list-style-type: none"> <li>1. Restart the system, confirm that the fault continues.</li> </ol>  |
| OV-TEM<br>(1032 DATA:0000)                  | Module over temperature                     | <ol style="list-style-type: none"> <li>1. Check whether the surrounding environment of the inverter has poor heat dissipation.</li> <li>2. Confirm whether the product installation meets the requirements.</li> </ol>      |
| RelayChk-FAIL<br>(1035 DATA:0000)           | Relay failure                               | <ol style="list-style-type: none"> <li>1. Restart the system, confirm that the fault continues.</li> </ol>  |
| UN-TEM<br>(1034 DATA:0000)                  | Low temperature protection                  | <ol style="list-style-type: none"> <li>1. Check the working environment temperature of the inverter.</li> <li>2. Restart the system to confirm if the fault continues.</li> </ol>   |
| PV ISO-PRO01<br>(1033 DATA:0001)            | PV negative ground fault                    | <ol style="list-style-type: none"> <li>1. Check whether the PV strings have insulation problems.</li> <li>2. Check whether the PV cable is damaged.</li> </ol>  |
| PV ISO-PRO02<br>(1033 DATA:0002)            | PV positive ground fault                    |   |
| 12Power-FAULT<br>(1038 DATA:0000)           | 12V undervoltage failure                    | <ol style="list-style-type: none"> <li>1. Check current leakage to ground. Verify your grounding. Verify all wires are in good condition and not leaking current to ground.</li> </ol>                                      |
| ILeak-PRO01<br>(1034 DATA:0001)             | Leakage current failure 01 (30mA)           |   |
| ILeak-PRO02<br>(1034 DATA:0002)             | Leakage current failure 02 (60mA)           |   |
| ILeak-PRO03<br>(1034 DATA:0003)             | Leakage current failure 03 (150mA)          |   |
| ILeak-PRO04<br>(1034 DATA:0004)             | Leakage current failure 04                  |   |
| ILeak_Check<br>(1039 DATA:0000)             | Leakage current sensor failure              |   |
| GRID-INTF02<br>(1046 DATA:0000)             | Power grid disturbance 02                   | <ol style="list-style-type: none"> <li>1. Confirm whether the grid is seriously distorted.</li> <li>2. Check whether the AC cable is connected reliably.</li> </ol>   |
| OV-Vbatt-H/<br>OV-BUS-H<br>(1051 DATA:0000) | Battery overvoltage hardware failure / VBUS | <ol style="list-style-type: none"> <li>1. Check if the battery circuit breaker is tripping.</li> <li>2. Check if the battery is damaged.</li> </ol>   |

| Message Name                    | Information Description                        | Troubleshooting Suggestion  |
|---------------------------------|--|---|
| OV-ILLC<br>(1052 DATA:0000)     | LLC hardware overcurrent                       | 1. Check whether the backup load is overloaded.<br>2. Restart the system, confirm that the fault continues.                                       |
| INI-FAULT<br>(1031 DATA:0000)   | AD zero drift overlink                         | 1. Restart the system, confirm that the fault continues.  |
| DSP-B-FAULT<br>(1036 DATA:0000) | The master-slave DSP communication is abnormal |   |
| AFCI-Check<br>(1040 DATA:0000)  | AFCI self-test failure                         |   |
| ARC- FAULT<br>(1041 DATA:0000)  | AFCI failure                                   | 1. Verify connections are tight within your PV system. Arc fault settings can be changed in advanced settings if further adjustment is necessary. |

Table 7.1 Fault message and description



**NOTE:**

If the inverter displays any alarm message as listed in Table 8.1; please turn off the inverter and wait for 5 minutes before restarting it .  
If the failure persists, please contact your local distributor or the service center.

Please keep ready with you the following information before contacting us.

1. Serial number of Solis Singles Phase Inverter;
2. The distributor/dealer of Solis Singles Phase Inverter (if available);
3. Installation date.
4. The description of the problem together with necessary information, pictures, attachment.
5. The PV array configuration (e.g. number of panels, capacity of panels, number of strings, etc.);
6. Your contact details.

## 8. Specifications

|                                      |                                   |
|--------------------------------------|-----------------------------------|
| Technical Data                       | S6-EH1P9.9K03-NV-YD-L             |
| <b>Input DC (PV side)</b>            |                                   |
| Recommended max. PV power            | 19800W                            |
| Max Usable PV Input Power            | 15840W                            |
| Max. input voltage                   | 550V                              |
| Rated voltage                        | 380V                              |
| Start-up voltage                     | 100V                              |
| MPPT voltage range                   | 80-520V                           |
| Full load MPPT voltage range         | 166-450V                          |
| Max. input power per MPPT            | 12kW                              |
| Max. input current                   | 40A/40A/40A                       |
| Max. short circuit current           | 50A/50A/50A                       |
| MPPT number/Max input strings number | 3/6                               |
| <b>Battery</b>                       |                                   |
| Battery Type                         | Lithium-ion/Lead-acid             |
| Battery Voltage range                | 40 - 60V                          |
| Max. charge / discharge power        | 9.9kW                             |
| Max. charge / discharge current      | 208A                              |
| Communication                        | CAN/RS485                         |
| <b>Output AC(Grid side)</b>          |                                   |
| Rated output power                   | 9.9kW                             |
| Max. apparent output power           | 9.9kVA                            |
| Operation phase                      | 1/N/PE                            |
| Rated grid voltage                   | 220 V/230 V                       |
| The grid voltage range               | 187-253 V                         |
| Rated grid frequency                 | 50 Hz/60 Hz                       |
| AC grid frequency range              | 45-55 Hz/55-65 Hz                 |
| Rated grid output current            | 45.0 A/43.1 A                     |
| Max. output current                  | 45.0 A/43.1 A                     |
| Power factor range                   | >0.99 (0.8 leading - 0.8 lagging) |
| THDi                                 | <3%                               |



## 8. Specifications

|  |                              |
|--|------------------------------|
| Technical Data                                       | S6-EH1P9.9K03-NV-YD-L        |
| <b>Input AC (Grid side)</b>                          |                              |
| Input voltage range                                  | 187-253V                     |
| Max. input current                                   | 67.5 A/64.5 A                |
| Frequency range                                      | 45-55 Hz/ 55-65Hz            |
| <b>Output AC(Back-up)</b>                            |                              |
| Rated output power                                   | 9.9kW                        |
| Max. apparent output power                           | 2 times of rated power, 10 S |
| Back-up switch time                                  | <4ms                         |
| Rated output voltage                                 | L/N/PE, 220 V/230 V          |
| Rated frequency                                      | 50Hz/60Hz                    |
| Rated. output current                                | 45.0 A/43.1 A                |
| Max. output overcurrent protection, 10sec            | 90.1 A                       |
| Max. Continuous AC Passthrough                       | 90 A                         |
| THDv(@linear load)                                   | <3%                          |
| Maximum number of parallel                           | 6                            |
| <b>Input - Generator</b>                             |                              |
| Max. input power                                     | 9.9kW                        |
| Max. input current                                   | 45.0 A/43.1 A                |
| Rated input frequency                                | 50Hz/60Hz                    |
| <b>Efficiency</b>                                    |                              |
| Max. efficiency                                      | 97.6%                        |
| EU efficiency  | 97.0%                        |
| <b>Protection</b>                                    |                              |
| DC surge protection/AC surge protection              | Yes                          |
| Ground fault detection                               | Yes                          |
| Residual current monitoring unit                     | Yes                          |
| Integrated AFCI<br>(DC arc-fault circuit protection) | Yes                          |
| DC reverse-polarity protection                       | Yes (PV only)                |
| Over voltage category                                | DC type II/AC type III       |

|                             |   |
|-----------------------------|---|
| Technical Data              | S6-EH1P9.9K03-NV-YD-L   |
| <b>General data</b>         |   |
| Dimensions(W/H/D)           | 459*845*313mm   |
| Weight                      | 55.5kg  |
| Topology                    | Transformerless   |
| Operation temperature range | -25°C ~ +60°C   |
| Ingress protection          | TYPE 4X(IP66)   |
| Cooling concept             | Smart Fan cooling   |
| Max.operation altitude      | 4000m   |
| Grid connection standard    | NRS 097-2-1, IEC 62116, IEC 61727, IEC 60068, IEC 61683, EN 50530,EN50549-1 |
| Safty/EMC standard          | IEC/EN 62109-1/-2, EN 61000-6-2/-3  |
| <b>Features</b>             |   |
| DC connection               | MC4 plug(PV port)/Terminal Block(BAT port)                                  |
| AC connection               | Terminal Block  |
| Display                     | LED+Bluetooth+APP   |
| Communication               | RS485,CAN, Optional: Cellular, Wi-Fi, LAN                                   |
| Warranty                    | 5 years standard (extend to 20 years)                                       |

## 8. Specifications

|                                      |                                   |
|--------------------------------------|-----------------------------------|
| Technical Data                       | S6-EH1P12K03-NV-YD-L              |
| <b>Input DC (PV side)</b>            |                                   |
| Recommended max. PV power            | 24000W                            |
| Max Usable PV Input Power            | 19200W                            |
| Max. input voltage                   | 550V                              |
| Rated voltage                        | 380V                              |
| Start-up voltage                     | 100V                              |
| MPPT voltage range                   | 80-520V                           |
| Full load MPPT voltage range         | 166-450V                          |
| Max. input power per MPPT            | 12kW                              |
| Max. input current                   | 40A/40A/40A                       |
| Max. short circuit current           | 50A/50A/50A                       |
| MPPT number/Max input strings number | 3/6                               |
| <b>Battery</b>                       |                                   |
| Battery Type                         | Lithium-ion/Lead-acid             |
| Battery Voltage range                | 40 - 60V                          |
| Max. charge / discharge power        | 12kW                              |
| Max. charge / discharge current      | 250A                              |
| Communication                        | CAN/RS485                         |
| <b>Output AC(Grid side)</b>          |                                   |
| Rated output power                   | 12kW                              |
| Max. apparent output power           | 12kVA                             |
| Operation phase                      | 1/N/PE                            |
| Rated grid voltage                   | 220 V/230 V                       |
| The grid voltage range               | 187-253 V                         |
| Rated grid frequency                 | 50 Hz/60 Hz                       |
| AC grid frequency range              | 45-55 Hz/55-65 Hz                 |
| Rated grid output current            | 54.5 A/52.2 A                     |
| Max. output current                  | 54.5 A/52.2 A                     |
| Power factor range                   | >0.99 (0.8 leading - 0.8 lagging) |
| THDi                                 | <3%                               |

## 8. Specifications

|  |                              |
|--|------------------------------|
| Technical Data                                       | S6-EH1P12K03-NV-YD-L         |
| <b>Input AC (Grid side)</b>                          |                              |
| Input voltage range                                  | 187-253V                     |
| Max. input current                                   | 81.8 A/78.3 A                |
| Frequency range                                      | 45-55 Hz/ 55-65Hz            |
| <b>Output AC(Back-up)</b>                            |                              |
| Rated output power                                   | 12kW                         |
| Max. apparent output power                           | 2 times of rated power, 10 S |
| Back-up switch time                                  | <4ms                         |
| Rated output voltage                                 | L/N/PE, 220 V/230 V          |
| Rated frequency                                      | 50Hz/60Hz                    |
| Rated. output current                                | 54.5 A/52.2 A                |
| Max. output overcurrent protection, 10sec            | 109 A                        |
| Max. Continuous AC Passthrough                       | 90 A                         |
| THDv(@linear load)                                   | <3%                          |
| Maximum number of parallel                           | 6                            |
| <b>Input - Generator</b>                             |                              |
| Max. input power                                     | 12kW                         |
| Max. input current                                   | 54.5 A/52.2 A                |
| Rated input frequency                                | 50Hz/60Hz                    |
| <b>Efficiency</b>                                    |                              |
| Max. efficiency                                      | 97.6%                        |
| EU efficiency  | 97.0%                        |
| <b>Protection</b>                                    |                              |
| DC surge protection/AC surge protection              | Yes                          |
| Ground fault detection                               | Yes                          |
| Residual current monitoring unit                     | Yes                          |
| Integrated AFCI<br>(DC arc-fault circuit protection) | Yes                          |
| DC reverse-polarity protection                       | Yes (PV only)                |
| Over voltage category                                | DC type II/AC type III       |

|                             |  |
|-----------------------------|--|
| Technical Data              | S6-EH1P12K03-NV-YD-L   |
| <b>General data</b>         |  |
| Dimensions(W/H/D)           | 459*845*313mm  |
| Weight                      | 55.5kg   |
| Topology                    | Transformerless  |
| Operation temperature range | -25°C ~ +60°C  |
| Ingress protection          | TYPE 4X(IP66)  |
| Cooling concept             | Smart Fan cooling  |
| Max.operation altitude      | 4000m  |
| Grid connection standard    | NRS 097-2-1, IEC 62116, IEC 61727, IEC 60068,<br>IEC 61683, EN 50530,EN50549-1 |
| Safty/EMC standard          | IEC/EN 62109-1/-2, EN 61000-6-2/-3   |
| <b>Features</b>             |  |
| DC connection               | MC4 plug(PV port)/Terminal Block(BAT port)                                     |
| AC connection               | Terminal Block   |
| Display                     | LED+Bluetooth+APP  |
| Communication               | RS485,CAN, Optional: Cellular, Wi-Fi, LAN                                      |
| Warranty                    | 5 years standard (extend to 20 years)  |

## 8. Specifications

|                                      |                                   |
|--------------------------------------|-----------------------------------|
| Technical Data                       | S6-EH1P14K03-NV-YD-L              |
| <b>Input DC (PV side)</b>            |                                   |
| Recommended max. PV power            | 28000W                            |
| Max Usable PV Input Power            | 22400W                            |
| Max. input voltage                   | 550V                              |
| Rated voltage                        | 380V                              |
| Start-up voltage                     | 100V                              |
| MPPT voltage range                   | 80-520V                           |
| Full load MPPT voltage range         | 186-450V                          |
| Max. input power per MPPT            | 12kW                              |
| Max. input current                   | 40A/40A/40A                       |
| Max. short circuit current           | 50A/50A/50A                       |
| MPPT number/Max input strings number | 3/6                               |
| <b>Battery</b>                       |                                   |
| Battery Type                         | Lithium-ion/Lead-acid             |
| Battery Voltage range                | 40 - 60V                          |
| Max. charge / discharge power        | 14kW                              |
| Max. charge / discharge current      | 290A                              |
| Communication                        | CAN/RS485                         |
| <b>Output AC(Grid side)</b>          |                                   |
| Rated output power                   | 14kW                              |
| Max. apparent output power           | 14kVA                             |
| Operation phase                      | 1/N/PE                            |
| Rated grid voltage                   | 220 V/230 V                       |
| The grid voltage range               | 187-253 V                         |
| Rated grid frequency                 | 50 Hz/60 Hz                       |
| AC grid frequency range              | 45-55 Hz/55-65 Hz                 |
| Rated grid output current            | 63.6 A/60.9 A                     |
| Max. output current                  | 63.6 A/60.9 A                     |
| Power factor range                   | >0.99 (0.8 leading - 0.8 lagging) |
| THDi                                 | <3%                               |

## 8. Specifications

|  |                              |
|--|------------------------------|
| Technical Data                                       | S6-EH1P14K03-NV-YD-L         |
| <b>Input AC (Grid side)</b>                          |                              |
| Input voltage range                                  | 187-253V                     |
| Max. input current                                   | 95.5 A/91.3 A                |
| Frequency range                                      | 45-55 Hz/ 55-65Hz            |
| <b>Output AC(Back-up)</b>                            |                              |
| Rated output power                                   | 14kW                         |
| Max. apparent output power                           | 2 times of rated power, 10 S |
| Back-up switch time                                  | <4ms                         |
| Rated output voltage                                 | L/N/PE, 220 V/230 V          |
| Rated frequency                                      | 50Hz/60Hz                    |
| Rated. output current                                | 63.6 A/60.9 A                |
| Max. output overcurrent protection, 10sec            | 127 A                        |
| Max. Continuous AC Passthrough                       | 90 A                         |
| THDv(@linear load)                                   | <3%                          |
| Maximum number of parallel                           | 6                            |
| <b>Input - Generator</b>                             |                              |
| Max. input power                                     | 14kW                         |
| Max. input current                                   | 63.6 A/60.9 A                |
| Rated input frequency                                | 50Hz/60Hz                    |
| <b>Efficiency</b>                                    |                              |
| Max. efficiency                                      | 97.6%                        |
| EU efficiency  | 97.0%                        |
| <b>Protection</b>                                    |                              |
| DC surge protection/AC surge protection              | Yes                          |
| Ground fault detection                               | Yes                          |
| Residual current monitoring unit                     | Yes                          |
| Integrated AFCI<br>(DC arc-fault circuit protection) | Yes                          |
| DC reverse-polarity protection                       | Yes (PV only)                |
| Over voltage category                                | DC type II/AC type III       |

|                             |  |
|-----------------------------|--|
| Technical Data              | S6-EH1P14K03-NV-YD-L   |
| <b>General data</b>         |  |
| Dimensions(W/H/D)           | 459*845*313mm  |
| Weight                      | 55.5kg   |
| Topology                    | Transformerless  |
| Operation temperature range | -25°C ~ +60°C  |
| Ingress protection          | TYPE 4X(IP66)  |
| Cooling concept             | Smart Fan cooling  |
| Max.operation altitude      | 4000m  |
| Grid connection standard    | NRS 097-2-1, IEC 62116, IEC 61727, IEC 60068,<br>IEC 61683, EN 50530,EN50549-1 |
| Safty/EMC standard          | IEC/EN 62109-1/-2, EN 61000-6-2/-3   |
| <b>Features</b>             |  |
| DC connection               | MC4 plug(PV port)/Terminal Block(BAT port)                                     |
| AC connection               | Terminal Block   |
| Display                     | LED+Bluetooth+APP  |
| Communication               | RS485,CAN, Optional: Cellular, Wi-Fi, LAN                                      |
| Warranty                    | 5 years standard (extend to 20 years)  |



## 8. Specifications

|                                      |                                   |
|--------------------------------------|-----------------------------------|
| Technical Data                       | S6-EH1P16K03-NV-YD-L              |
| <b>Input DC (PV side)</b>            |                                   |
| Recommended max. PV power            | 32000W                            |
| Max Usable PV Input Power            | 25600W                            |
| Max. input voltage                   | 550V                              |
| Rated voltage                        | 380V                              |
| Start-up voltage                     | 100V                              |
| MPPT voltage range                   | 80-520V                           |
| Full load MPPT voltage range         | 186-450V                          |
| Max. input power per MPPT            | 12kW                              |
| Max. input current                   | 40A/40A/40A                       |
| Max. short circuit current           | 50A/50A/50A                       |
| MPPT number/Max input strings number | 3/6                               |
| <b>Battery</b>                       |                                   |
| Battery Type                         | Lithium-ion/Lead-acid             |
| Battery Voltage range                | 40 - 60V                          |
| Max. charge / discharge power        | 16kW                              |
| Max. charge / discharge current      | 290A                              |
| Communication                        | CAN/RS485                         |
| <b>Output AC(Grid side)</b>          |                                   |
| Rated output power                   | 16kW                              |
| Max. apparent output power           | 16kVA                             |
| Operation phase                      | 1/N/PE                            |
| Rated grid voltage                   | 220 V/230 V                       |
| The grid voltage range               | 187-253 V                         |
| Rated grid frequency                 | 50 Hz/60 Hz                       |
| AC grid frequency range              | 45-55 Hz/55-65 Hz                 |
| Rated grid output current            | 72.7 A/69.6 A                     |
| Max. output current                  | 72.7 A/69.6 A                     |
| Power factor range                   | >0.99 (0.8 leading - 0.8 lagging) |
| THDi                                 | <3%                               |

## 8. Specifications

|  |                              |
|--|------------------------------|
| Technical Data                                       | S6-EH1P16K03-NV-YD-L         |
| <b>Input AC (Grid side)</b>                          |                              |
| Input voltage range                                  | 187-253V                     |
| Max. input current                                   | 109.1 A/104.3 A              |
| Frequency range                                      | 45-55 Hz/ 55-65Hz            |
| <b>Output AC(Back-up)</b>                            |                              |
| Rated output power                                   | 16kW                         |
| Max. apparent output power                           | 2 times of rated power, 10 S |
| Back-up switch time                                  | <4ms                         |
| Rated output voltage                                 | L/N/PE, 220 V/230 V          |
| Rated frequency                                      | 50Hz/60Hz                    |
| Rated. output current                                | 72.7 A/69.6 A                |
| Max. output overcurrent protection,10sec             | 145 A                        |
| Max. Continuous AC Passthrough                       | 90 A                         |
| THDv(@linear load)                                   | <3%                          |
| Maximum number of parallel                           | 6                            |
| <b>Input - Generator</b>                             |                              |
| Max. input power                                     | 16kW                         |
| Max. input current                                   | 72.7 A/69.6 A                |
| Rated input frequency                                | 50Hz/60Hz                    |
| <b>Efficiency</b>                                    |                              |
| Max. efficiency                                      | 97.6%                        |
| EU efficiency  | 97.0%                        |
| <b>Protection</b>                                    |                              |
| DC surge protection/AC surge protection              | Yes                          |
| Ground fault detection                               | Yes                          |
| Residual current monitoring unit                     | Yes                          |
| Integrated AFCI<br>(DC arc-fault circuit protection) | Yes                          |
| DC reverse-polarity protection                       | Yes (PV only)                |
| Over voltage category                                | DC type II/AC type III       |

|                             |  |
|-----------------------------|--|
| Technical Data              | S6-EH1P16K03-NV-YD-L   |
| <b>General data</b>         |  |
| Dimensions(W/H/D)           | 459*845*313mm  |
| Weight                      | 55.5kg   |
| Topology                    | Transformerless  |
| Operation temperature range | -25°C ~ +60°C  |
| Ingress protection          | TYPE 4X(IP66)  |
| Cooling concept             | Smart Fan cooling  |
| Max.operation altitude      | 4000m  |
| Grid connection standard    | NRS 097-2-1, IEC 62116, IEC 61727, IEC 60068,<br>IEC 61683, EN 50530,EN50549-1 |
| Safty/EMC standard          | IEC/EN 62109-1/-2, EN 61000-6-2/-3   |
| <b>Features</b>             |  |
| DC connection               | MC4 plug(PV port)/Terminal Block(BAT port)                                     |
| AC connection               | Terminal Block   |
| Display                     | LED+Bluetooth+APP  |
| Communication               | RS485,CAN, Optional: Cellular, Wi-Fi, LAN                                      |
| Warranty                    | 5 years standard (extend to 20 years)  |

## 8. Specifications

|                                      |                                   |
|--------------------------------------|-----------------------------------|
| Technical Data                       | S6-EH1P18K03-NV-YD-L              |
| <b>Input DC (PV side)</b>            |                                   |
| Recommended max. PV power            | 32000W                            |
| Max Usable PV Input Power            | 28800W                            |
| Max. input voltage                   | 550V                              |
| Rated voltage                        | 380V                              |
| Start-up voltage                     | 100V                              |
| MPPT voltage range                   | 80-520V                           |
| Full load MPPT voltage range         | 186-450V                          |
| Max. input power per MPPT            | 12kW                              |
| Max. input current                   | 42A/42A/42A                       |
| Max. short circuit current           | 50A/50A/50A                       |
| MPPT number/Max input strings number | 3/6                               |
| <b>Battery</b>                       |                                   |
| Battery Type                         | Lithium-ion/Lead-acid             |
| Battery Voltage range                | 40 - 60V                          |
| Max. charge / discharge power        | 18kW                              |
| Max. charge / discharge current      | 320A                              |
| Communication                        | CAN/RS485                         |
| <b>Output AC(Grid side)</b>          |                                   |
| Rated output power                   | 18kW                              |
| Max. apparent output power           | 18kVA                             |
| Operation phase                      | 1/N/PE                            |
| Rated grid voltage                   | 220 V/230 V                       |
| The grid voltage range               | 187-253 V                         |
| Rated grid frequency                 | 50 Hz/60 Hz                       |
| AC grid frequency range              | 45-55 Hz/55-65 Hz                 |
| Rated grid output current            | 81.8 A/78.2 A                     |
| Max. output current                  | 81.8 A/78.2 A                     |
| Power factor range                   | >0.99 (0.8 leading - 0.8 lagging) |
| THDi                                 | <3%                               |

## 8. Specifications

|  |                              |
|--|------------------------------|
| Technical Data                                       | S6-EH1P18K03-NV-YD-L         |
| <b>Input AC (Grid side)</b>                          |                              |
| Input voltage range                                  | 187-253V                     |
| Max. input current                                   | 122.7 A/117.4 A              |
| Frequency range                                      | 45-55 Hz/ 55-65Hz            |
| <b>Output AC(Back-up)</b>                            |                              |
| Rated output power                                   | 18kW                         |
| Max. apparent output power                           | 2 times of rated power, 10 S |
| Back-up switch time                                  | <4ms                         |
| Rated output voltage                                 | L/N/PE, 220 V/230 V          |
| Rated frequency                                      | 50Hz/60Hz                    |
| Rated. output current                                | 81.8 A/78.2 A                |
| Max. output overcurrent protection, 10sec            | 164 A                        |
| Max. Continuous AC Passthrough                       | 90 A                         |
| THDv(@linear load)                                   | <3%                          |
| Maximum number of parallel                           | 6                            |
| <b>Input - Generator</b>                             |                              |
| Max. input power                                     | 18kW                         |
| Max. input current                                   | 81.8 A/78.2 A                |
| Rated input frequency                                | 50Hz/60Hz                    |
| <b>Efficiency</b>                                    |                              |
| Max. efficiency                                      | 97.6%                        |
| EU efficiency  | 97.0%                        |
| <b>Protection</b>                                    |                              |
| DC surge protection/AC surge protection              | Yes                          |
| Ground fault detection                               | Yes                          |
| Residual current monitoring unit                     | Yes                          |
| Integrated AFCI<br>(DC arc-fault circuit protection) | Yes                          |
| DC reverse-polarity protection                       | Yes (PV only)                |
| Over voltage category                                | DC type II/AC type III       |

|                             |  |
|-----------------------------|--|
| Technical Data              | S6-EH1P18K03-NV-YD-L   |
| <b>General data</b>         |  |
| Dimensions(W/H/D)           | 459*845*313mm  |
| Weight                      | 55.5kg   |
| Topology                    | Transformerless  |
| Operation temperature range | -25°C ~ +60°C  |
| Ingress protection          | TYPE 4X(IP66)  |
| Cooling concept             | Smart Fan cooling  |
| Max.operation altitude      | 4000m  |
| Grid connection standard    | NRS 097-2-1, IEC 62116, IEC 61727, IEC 60068,<br>IEC 61683, EN 50530,EN50549-1 |
| Safty/EMC standard          | IEC/EN 62109-1/-2, EN 61000-6-2/-3   |
| <b>Features</b>             |  |
| DC connection               | MC4 plug(PV port)/Terminal Block(BAT port)                                     |
| AC connection               | Terminal Block   |
| Display                     | LED+Bluetooth+APP  |
| Communication               | RS485,CAN, Optional: Cellular, Wi-Fi, LAN                                      |
| Warranty                    | 5 years standard (extend to 20 years)  |

### Frequently Asked Questions

#### **Q1: Why I have "CAN Fail" Alarm on the inverter?**

A: "CAN Fail" indicates the CAN communication between inverter and battery is lost. Please double check if your CAN cable is correctly connected and if your battery is power on.

#### **Q2: Why I have "BATName-Fail" Alarm on the inverter ?**

A: Please check in the "Battery Setting->Battery Model" setting and confirm you selected the correct battery option as the nameplate of your battery module.

#### **Q3: Why I have "MET-SLT-Fail" Alarm on the inverter?**

A: Please check in the "Meter Setting->Meter Type" setting and confirm you selected the correct meter option corresponding to your smart meter.

#### **Q4: Why the power values on the screen are fluctuating very fast?**

A: If your loads are changing drastically, the inverter will adjust its power accordingly. If you confirm the loads are stable while the inverter power is changing very fast, please double check your meter CT's direction and make sure the arrow is towards grid.

#### **Q5: Why I have "OV-ILLC" Alarm on the inverter ?**

A: OV-ILLC indicates there is an overcurrent issue on the internal LLC circuit. It could be transient status during extreme condition such as overload. If it happens constantly or too frequent and the extreme conditions have been excluded, please contact Solis service team.

#### **Q6: Why I have "OV-BATT-H" Alarm on the inverter ?**

A: OV-BATT-H indicates over voltage issue on the hardware of battery circuit. It could be caused by high battery voltage at full SOC, battery suddenly switching off, etc. If it happens constantly or too frequent and the extreme conditions have been excluded, please contact Solis service team.

#### **Q7: Why I have "No-Battery" Alarm on the inverter?**

A: Please double check if the battery power cables have been correctly connected and the battery breaker (on battery or external) has been turn on. If you don't want to connect the battery for now, please select the "No battery" option in "Battery Setting->Battery Model" to prevent the alarm to show up.

Ginlong Technologies Co., Ltd.

No. 57 Jintong Road, Binhai Industrial Park, Xiangshan, Ningbo,  
Zhejiang, 315712, P.R.China.

Tel: +86 (0)574 6578 1806

Email: [info@ginlong.com](mailto:info@ginlong.com)

Web: [www.solisinverters.com](http://www.solisinverters.com)

Please adhere to the actual products in case of any discrepancies in this user manual.

If you encounter any problem on the inverter, please find out the inverter S/N  
and contact us, we will try to respond to your question ASAP.